


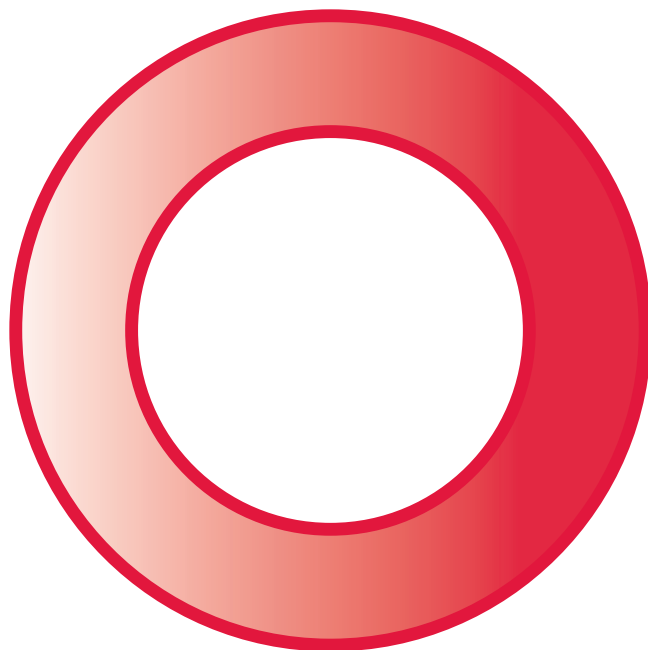

Brought to you
by Vodafone



emporia**RL1**

DEAR MOBILE PHONE USER!

Congratulations on your **emporia RL1** mobile phone!

To get you acquainted with your new mobile phone as quickly as possible, we have put together all the essential information on a few pages. The following pages of the user guide let you choose how much time you want to spend acquainting yourself with the most important functions of your mobile phone.

We hope you will have fun with your phone, and wish you all the best.

EMPORIA Telecom

Eveline Pupeter

Management

Albert Fellner

PACKAGE CONTENT:



Mobile phone
with Desktopcharger
(TL-RL1)



Charging cable
(RL - V170EU)



Battery pack
(AK - RL1)



User guide

1 START

1.1 WHAT ARE ALL THE KEYS FOR?

Loudspeaker

Display (=Screen)

End Call/Back/Delete key

- During a call: End call
- In menu: one step back
- In standby mode access my menu
- When entering numbers or letters: delete

Make or receive a call/OK-key

- Dialling: Insert number and press
- Incoming call: answer
- In menu: select
- In standby mode: Access to call list (dialled, received, missed)

Arrow keys

- In standby mode access menu with
- In standby mode access phone book with

Star key

- Press twice: + (for country codes, i.e. +44 for UK)
- Press 3 times: insert a dial pause
- When writing: special symbols (?!,@-+ \$€ etc.)

Key / Voicemail key

- Press and hold: listen to your voicemail
- When writing (SMS, phone book): insert a space

Pound key

- Press and hold: List of missed calls
- When writing: Switch from upper to lower case or numbers



Volume adjustment


- Change the receiver volume during a call
- If telephone rings:
 - press \ominus to turn off the ringer
 - (it will ring again for the next call)

On/off key

To switch on or off: press and hold for 2 seconds



DISPLAY SYMBOLS

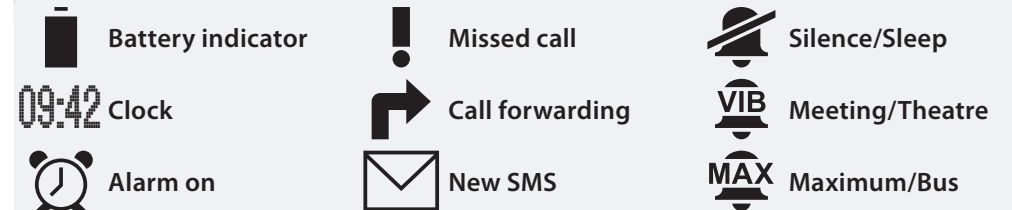



Flashlight key 

To switch on/off the flashlight.

CAUTION: Don't shine the light directly into the eyes of people or animals!

Key lock 

Prevents accidental keypresses

To lock/unlock the keypad press and hold for 2 seconds

(See also chapter 3.4.2)

Battery compartment

High performance Li-Ion battery

Internal antenna



Signal strength



Roaming If you are abroad, this symbol will replace the signal strength symbol to let you know that it is now more expensive to make a call.



Top 5

The most important numbers at the beginning of your contact list, independent of their alphabetical order. *(see section 4.3.4)*

TABLE OF CONTENT

1 Start

1.1	What are all the keys for?	03
1.2	Inserting the SIM card	10
1.3	Inserting the battery	10
1.4	Charging the battery	11
1.4.1	Charging with the desktop charger	11
1.4.2	Charging with the charger cable	11
1.5	You are ready: Turning the mobile phone on	12
1.6	De-activating the PIN code prompt	13
1.7	Setting the date and time	13

2 10 minutes to get to know your mobile phone

2.1	Don't worry if you get lost in the menu	14
2.2	Receiving and ending calls	14
2.3	Dialling with the keypad	15
2.4	Redial / Call list	15
2.5	Handsfree	15
2.5.1	Handsfree with the desktop charger	15
2.6	Dialling from the phone book	16
2.7	Battery indicator and signal strength	16
2.8	Accessing your phone book with SMS	17
2.9	Backlight time	17

3 20 minutes for easy handling

3.1	Useful functions of the keypad	18
3.1.1	* Key: Numbers Dialed	18
3.1.2	# Key: Missed Calls	18
3.1.3	0 Key: Listen to Voicemail	18
3.1.4	1 to 5: Speed Dialling	18
3.1.5	Key: Call List	18
3.2	My Menu	19
3.2.1	Activating My Menu	19
3.2.2	Getting into My Menu Listing	19
3.2.3	Setting up My Menu Favourites	19
3.3	Alarm	20
3.3.1	Turning the Alarm On or Off	20
3.3.2	Setting and changing alarm time	20
3.3.3	Shutting Off the ringing alarm	20
3.3.4	Snooze function	21
3.3.5	Changing the alarm tone	21
3.4	Key lock	22
3.4.1	Manual keypad lock	22
3.4.2	Automatic keypad lock	22
3.5	ON/OFF - button	23
3.6	Menu - button	23

4 30 minutes for pros

4.1	Entering text with the keypad	24
4.2	SMS - text messages	26
4.2.1	Writing SMS	26
4.2.2	Sending SMS	27
4.2.3	Receiving SMS	28
4.2.4	Answering SMS	28
4.2.5	Deleting SMS	29
4.2.6	Sending Phone Book Entries via SMS	29
4.2.7	Creating and Inserting Templates	30
4.2.8	SMS Blacklist	31
4.2.9	SMS confirmation	31
4.2.10	SMS Service Centre Number	31
4.3	Phone book	32
4.3.1	New phone book entry: Saving names and numbers	32
4.3.2	Editing phone book entries	33
4.3.3	Name Search	34
4.3.4	Top 5: The five most important numbers	35
4.3.5	Saving telephone numbers from Call lists or SMS to the Phone book	36
4.3.6	Fixed dialling numbers	36
4.3.7	Phone book settings	38
4.3.8	Accessing the Phone book via SMS	38
4.4	Settings	39
4.4.1	Silent/Sleep, Meeting/Theatre, or Maximum/Bus	39
4.4.2	De-activate PIN Prompt	40
4.4.3	SMS to Phonebook	41
4.4.4	Birthday reminders	42
4.4.5	Phone Book settings	43
4.4.6	Top 5: The most important numbers	43
4.4.7	Voicemail number	43
4.4.8	SMS Service centre number	43

5 Menu overview 44

6 Product and safety information 46

- 6.1 RF Exposure.....47
- 6.2 Distraction.....48
 - EC-Declaration of Conformity.....49
- 6.3 Product Handling.....50
- 6.4 Electrical Safety.....53
- 6.5 Battery Handling & Safety.....53
- 6.6 Interference.....54
- 6.7 Explosive environments.....55
- 6.8 Warranty.....56
- 6.9 Disposal.....56
- 6.10 Technical product description.....57

7 Frequently asked questions 58

1.2 INSERTING THE SIM CARD



You need a SIM card to use your phone. The SIM card is the small card with the clipped corner, which you got from your network provider. It serves as identification in the mobile phone network.

Insert the SIM card as follows:

1. Press the battery cover down.
2. Slide the cover a few millimetres up and take it off. Remove the battery pack (if present) by lifting it from the bottom and taking/pulling it out.
3. Insert the SIM card into the SIM card slot with the gold chip down and the clipped corner on the top left.

1.3 INSERTING THE BATTERY

4. The battery contacts have to face the gold coloured contacts of the mobile phone.
5. Replace the battery cover to the phone with the two hooks pointing forward. Slide the cover under light pressure until it snaps into place.

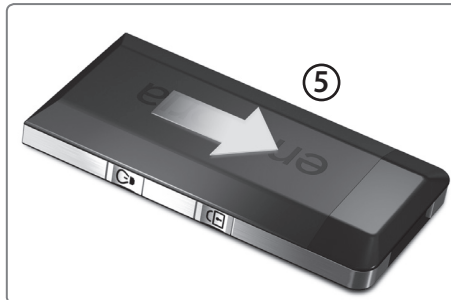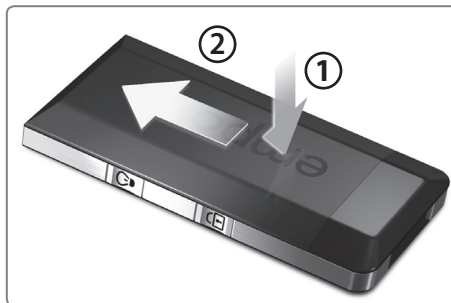

1.4 CHARGING THE BATTERY

Please note: The battery pack included with your mobile phone should be charged for at least 4 hours before your first call.


1.4.1 Charging with the desktop charger

1. Insert the power plug into the power socket.
2. Insert the plug of the charger cable into the socket on the rear side of the desktop charger.
Finally insert the mobile phone into the desktop charger.



1.4.2 Charging with the charger cable


1. Insert the power plug into the power socket.
2. Insert the plug of the charger cable into the socket on the bottom of the mobile phone.
3. At the start of the charging process a large battery symbol is shown, which begins to fill up.

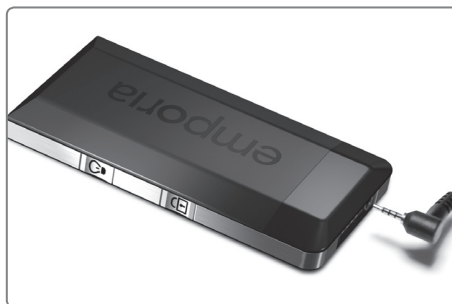




After a few seconds the large battery symbol disappears and the battery icon, in the bottom left corner of the screen, continues to fill up .






4. Once the battery is fully charged, all four bars of the battery icon stop moving.
5. Disconnect the charger cable from mobile phone and power socket.

1.5 YOU ARE READY: TURNING THE MOBILE PHONE ON

Press the  key on the left of the mobile phone for two seconds. This will turn the mobile phone on.

When you turn on your phone for the first time, you will be prompted to select a display language: Using   move to the desired language and select it with . You may change your selection at any time later by using **Settings/Language** in the menu.

Now set the time and date as follows:



1. Using the keypad or  , set the hour by using two digits (i.e.: "09" for 9am) and continue with  and set the minutes in the same way. If you made a mistake somewhere, go **Back** with .
2. Save these settings with .
3. Use the same procedure for setting the date.

You may change date and time anytime later by using **Settings/Time & date** in the menu. (*see section 1.7*)

When first using a new SIM card, the 4 digit PIN code must be entered. The PIN code is designed to prevent unauthorised activation of your mobile phone.

However, it does not prevent someone else from using your phone once it is turned on.

Please refer to the documentation of your network provider for your PIN code (you received an information package with your SIM card).










- Enter the PIN code with the keypad and select it with .
- Any mistakes while entering may be deleted with .

We recommend de-activating the PIN code. (*see section 1.6*)















1.6 DE-ACTIVATING THE PIN CODE PROMPT

To prevent problems caused by forgetting the PIN code, we recommend you de-activate the PIN prompt.

However, this is not possible with all network providers.


1. Press  key. The menu will be displayed.
2. Use  to navigate to **Settings** and select it with .
3. Use  to navigate to **PIN request** and select it with .
4. Select **Off** using . (If the **Off** option background is not already highlighted, navigate there by pressing  to select it)
5. The PIN prompt appears.
Enter the PIN code on the keypad and confirm with .
6. Go back to standby mode using .
The PIN prompt is now deactivated.

1.7 SETTING THE DATE AND TIME

1. Press  key. The menu will be displayed.
2. Use  to navigate to **Settings** and select it with .
3. Use  to navigate to **Time & date** and select it with .
4. Use  to select **Set time**.
5. Use the keypad or  , set the hour by using two digits (i.e.: "09" for 9 am) and save it using .
6. Use the keypad or  , set the minutes by using two digits and save it using . The display will show **Time set**.
7. Use  to navigate to **Set date**, and select it with .
Proceed as with **Set time**.


2 10 MINUTES TO GET TO KNOW YOUR MOBILE PHONE





2.1 DON'T WORRY IF YOU GET LOST IN THE MENU

If you get “lost” in the menu, you can go back quickly by pressing  several times. This will always return you to the familiar look of the screen in standby mode.

- When the mobile phone has not been used for 10 seconds, the screen will turn off. The mobile phone is then in energy saving mode, but remains ready to receive calls.
Important information such as a missed call, the warning of an almost empty battery or the charging progress are still visible.
- Just press any key once to re-activate the screen.
- Don't worry: If you were in a menu point earlier and the screen is now dark, when you then press a key the light is restored and you are returned to your previous position.

2.2 RECEIVING AND ENDING CALLS




If a call is received, the phone will ring and vibrate. The  key and the flashlight blink, and the number and name of the caller will be displayed. (if saved in phone book)

- Receive a call by pressing .
- To end a call press . If the caller hangs up first, this is not necessary.
- To reject a call when it rings, press .
- If you don't want to reject the call, but also don't want the ringing to continue (you are in a public place like a theatre or restaurant), press the VOL  key. The ringer is muted for the present call (but will ring again for the next one).





2.3 DIALLING WITH THE KEYPAD

ALWAYS enter the telephone number together with the area code.

(Example: enter "049789789" for number 789789 with area code 049.)

- Press  to connect.
- End the call by pressing . If the other caller hangs up first, you don't need to press .

2.4 REDIAL / CALL LIST



1. Press the  key to show previously dialled, missed or received calls.
2. Use   to navigate through the list.
3. Press  to call selected numbers. (see also section 3.1.5)

2.5 HANDSFREE

1. While making a call, press  to open the call menu.
2. Use  to navigate to **Handsfree** and select it by pressing .
3. To change back, select **Handsfree** from the call menu.





2.5.1 Handsfree with the desktop charger

If the mobile phone is in the desktop charger you are able to:

- Answer incoming call by pressing the handsfree key on the desktop charger.
- Make a call, press  to select a phonebook entry and dial by pressing .
The phone is automatically in handsfree mode.
- Pick up the phone or place it into the desktop charger during a call.
Handsfree mode is switched on or off automatically.
- End a call by pressing the handsfree key on the desktop charger.

2.6 DIALLING FROM THE PHONE BOOK

Saved names and numbers are listed alphabetically in the phone book.

1. Press  in standby mode: Phonebook will be displayed.
2. Use   to navigate to the desired entry.
3. Press  to call.

Please note: To save yourself entering new telephone numbers into the phone book, you can have them sent to you via SMS. See section 2.8.

Please note: alphabetical search, see section 4.3.3.

Please note: you may store your 5 most important numbers at the beginning of your phone book list, independent of the alphabetical ordering, see section 4.3.4.

2.7 BATTERY INDICATOR AND SIGNAL STRENGTH

In standby mode the battery status is displayed on the upper left of the screen. When the battery charge drops below 25 % (4 bars indicate 100%), and the warning flashes, charge the battery with the charger cable. (see section 1.4)



In standby mode you will see the signal strength displayed on the upper right of the screen. If it drops below 25 % (4 bars indicate 100%), reception and sound quality will be impaired. Try to find a location with better signal strength.

2.8 ACCESSING YOUR PHONE BOOK WITH SMS

You can receive Phonebook entries (from relations, friends, ...) by SMS message.

The messages have to be written in the following format:

#Name#Number# → Example: #Tobias#01509876543#

- The telephone number has to be entered including the area code.
- We recommend to save all numbers in international format with the international country code.

Example of an English international number: #Toby#+441509876543#

When you receive the SMS the number is automatically saved to the Phonebook.

Note: If your text message memory is full no Phonebook entries can be received by text message. Delete existing text messages in order to free up memory space. See chapter 4.2.5.

If you do not wish to use this function, go to **Settings** in the Menu or the SMS Menu, select **SMS in PhoneBk** and switch it **OFF**. (Also see chapter 4.4.3)

2.9 BACKLIGHT TIME

In the menu, **Settings / Backlight time**, you can set the backlight to shut off after 2, 5, 10, 20, or 30 seconds. Shorter backlight settings use less energy.




If the backlight is off (screen is dark), press any key to turn it on again.

Even if you just opened a particular menu item and the screen went dark – don't worry! Pressing a key will only restore the backlight without changing what you were doing before.




3 20 MINUTES FOR EASY HANDLING

3.1 USEFUL FUNCTIONS OF THE KEYPAD

3.1.1 * Key: Numbers Dialed

1. Press * 3 seconds: The list of most recently dialed numbers will be displayed with date and time signature
2. Use   to navigate through the list.
3. Press  to call a selected number.

3.1.2 # Key: Missed Calls

1. Press # 3 seconds: The list of missed calls will be displayed with date and time signature
2. Use   to navigate through the list.
3. Press  to call a selected number.

3.1.3 0 Key: Listen to Voicemail





Press and hold the 0 key to connect to your voicemail. (See chapter 4.4.7)

3.1.4 1 to 5: Speed Dialling


By holding the respective key (1 to 5) you can quickly call your most important telephone numbers. These top 5 are entered into the Phonebook before the rest of the contacts in alphabetical order. (See chapter 4.3.4)

3.1.5 Key: Call List

This list shows your most recent calls (dialed, missed, received) with date and time.

1. Press  to see the call list.
2. Use   to navigate through the list.
3. Press  to call a selected number.

3.2 MY MENU

You can set up your favourite menu functions in **MyMenu** (without spending time scrolling in the main menu, e.g. Silent/Sleep, calculator, search names and so on). Once **MyMenu** is activated you access by pressing  in standby mode.

3.2.1 Activating My Menu










1. Press  key. The menu will be displayed.
2. Use  to navigate to **Settings** and select it with .
3. Use  to navigate to **MyMenu** and select it with .
4. Use  to navigate to **On** and confirm it with .

3.2.2 Getting into My Menu Listing

Press  in standby mode to bring up My Menu.








3.2.3 Setting up My Menu Favourites

1. Press  key. The **MyMenu** will displayed.
2. Press 3 x  to navigate to **Select options** and select it with .
3. Use  to navigate to the desired item and tick with  (switch on).
4. Use  to select the position number for the sequence and confirm it with .
5. Repeat the previous two steps to enter more favourites.
6. Save selection with  and confirm question **Save changes in MyMenu?** with .





3.3 ALARM

Your mobile phone is equipped with an alarm. The alarm will come with your selected alarm tone and a speaking clock.







To access the alarm menu proceed as follows:

1. Press  key. The menu will be displayed.
2. Use  to navigate to **Settings** and select it with .
3. Use  to navigate to **Alarm** and select it with .


3.3.1 Turning the alarm On or Off

1. To turn on the alarm select **New Time** with .
Set alarm time (see below) and confirm with .
2. To turn off the alarm, use  to navigate to **Off** and select it with .


3.3.2 Setting and changing alarm time

1. Using the keypad or the   keys, enter the hours using two digits (i.e. "07" for 7 am) and press  to continue.
2. Using the keypad or the   keys, enter the minutes using two digits and save them by pressing . After the confirmation message, the mobile phone will return to standby mode. The alarm symbol is displayed on screen.

3.3.3 Shutting Off the ringing alarm

- If the alarm is ringing, you may turn it off by pressing .
The alarm will come on again at the same time the next day.
- If no keys are pressed, the alarm will ring every 3 minutes for a total of 90 minutes.

3.3.4 Snooze function

To be reminded again after 5 minutes, select **Snooze** with the  key while the alarm is ringing. You may repeat this up to 17 times (90 minutes).

Otherwise shut off the alarm by pressing .

3.3.5 Changing the alarm tone



Settings / Sound & alert / Alarm melody lets you select the alarm tone or radio alarm clock. However you wish to be woken up by.

Please note: If you choose an alarm tone clearly different from your ring tone there is less chance of confusing the two.

3.4 KEY LOCK

To avoid accidental keypresses (if the phone is in your pocket or a handbag for example) you can lock the keypad.










3.4.1 Manual keypad lock


- To activate the key lock press the -button on the right side of the mobile phone and hold it for 2 seconds. A lock symbol indicates that the key lock has been activated.
- To switch off the key lock before using the phone hold the -button again for 2 seconds.



3.4.2 Automatic keypad lock

If you travel a lot with your mobile phone, we recommend using the automatic key lock. With this function the key lock is activated automatically, e.g. after the mobile phone is not used for 10 seconds.


To activate the automatic key lock:

1. Press  key. The menu will be displayed.
2. Use  to navigate to **Settings** and select it with .
3. Use  to navigate to **Keypad auto lock** and select it with .
4. Press  to select **On** to activate this function.
5. Use   to select the time before the automatic key lock is activated (2, 5, 10, 20 or 30 seconds) and confirm with .

A lock symbol indicates that the key lock is activated; this can be lifted at any time by holding the -button for 2 seconds.

Note: *incoming calls can be received as usual. If you want to reject the call, you first have to unlock the keypad (hold the -button for 2 seconds, then reject the call with .*

3.5 ON/OFF - BUTTON

To switch the mobile phone on or off hold the  button on the left hand side of the mobile phone for 2 seconds.

3.6 MENU - BUTTON

With the  button you can access the menu points:

SMS Message, Phone book, Call info, Settings





4 30 MINUTES FOR PROS

4.1 ENTERING TEXT WITH THE KEYPAD













You may enter numbers and letters with the keypad.

Every key represents several signs, depending on how often you press the key.



You may delete or change signs in the entered text later on.

- The vertical line „|“ shows your current position.
- You can change your position by using the   keys.
- By pressing and holding   you jump one line up and down at a time.

Available signs and functions.

 → .,?!'":@:1	 → m n o ö 6 ö	 → .,?!'":;()@-+\$€£¥#%*&~=α and Greek letters
 → a b c 2 ä à	 → p q r s 7 ß	 → Change between upper and lower case and keypad („Abc“ „ABC“ „123“ „abc“)
 → d e f 3 è	 → t u v 8 ü	
 → g h i 4	 → w x y z 9	
 → j k l 5	 → Spaces; 0	

Selecting a sign.

 → 1x press = j	 → 1x press = . (period)
→ 2x press = k	→ 2x press = , (comma)
→ 3x press = l	→ 3x press = ?
→ 4x press = 5	→ 4x press = !

Use the key, to Choose from 4 Writing Styles:



 **Abc**: Upper and lower case – Upper case only at beginning of sentence

 **abc**: Only lower case – all letters are written in lower case


 **ABC**: Only upper case – all letters are written in upper case

 **123**: Numbers





I Made a Mistake. What Now?

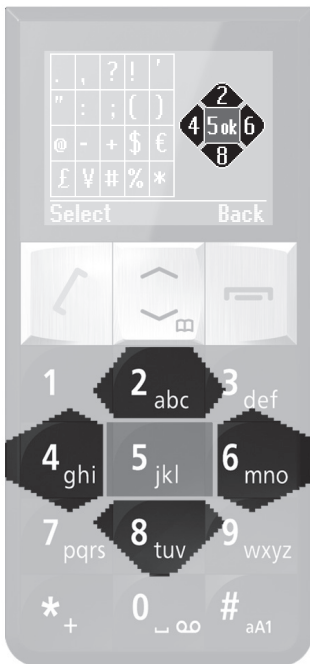
- To delete single signs on the left of the vertical line „|“, press the  key briefly.
- If you press and hold the  key for 3 seconds, all signs to the left of the vertical line „|“ are deleted.
(for instance to remove complete passages of text)

Inserting Special Symbols



Press the  key.

To move, as shown, up with the  key, down with the  key, left with the  key, and right with the  key.

Once you have found the desired sign, press 






or  to insert it into the text.

4.2 SMS - TEXT MESSAGES

SMS are short written messages which may be sent to other mobile phone users. You only pay for sending them.

Note: Some landline telephones can also receive SMS.

4.2.1 Writing SMS

1. Press  key. The menu will be displayed.
2. Use  to navigate to **SMS Message** and select it with .
3. Select **Write new SMS** with .
4. Compose your SMS with the keypad.
5. Delete any unwanted letters/signs by pressing .

Suggestions and tricks for composing a text message

– A name and phone number can be inserted into the SMS text from Phone book:

Select **Next** with .

Use  to navigate to **Insert name & number** and select it with .

Now you will see the phone book screen.

Use   to navigate to the desired entry and select it with .

– You can send up to a maximum 480 signs. If your message is longer than 160 or 320 signs, it will automatically be divided into 2 or 3 messages.

In the upper right corner of your screen you can see an indicator telling you how many signs are still available to add to your SMS.

*Example: **1/135** means that you have another 135 signs available for your message.*

If more than 160 signs have been written, the text will be sent in two messages, and the indicator in the upper right corner changes to **2/...**

4.2.2 Sending SMS

1. To send the completed text, press .

2. Select **Send** with .

3. Telephone number saved/not saved to your mobile phone:

A Telephone number already saved in the phone book:

4. Select **Search** by pressing .

5. Open **Phone book** by pressing  again.

6. Navigate to the name with  or enter the first letters of the name.

7. As soon as the desired number is displayed, confirm it with .



8. The text message is sent to the selected number.

B Telephone number used recently, but not saved in Phone book:

4. Select **Search** by pressing .

5. Using  to navigate to **Unsaved numbers**.

6. Select using .

7. Using , navigate to the desired number in the displayed list of numbers (dialled, received, missed, SMS), confirm it with .

8. The text message is sent to the selected number.

C New telephone number

4. Enter the telephone number on the keypad.

5. Press  to send SMS.

4.2.3 Receiving SMS

A short signal and vibration indicates a received SMS.

The display shows: **New SMS**

Press to select the SMS. Now you can read the message.

For longer texts, scroll down with the key.

4.2.4 Answering SMS

1. When you have finished reading the SMS, use to scroll down until the items **Delete SMS, Call number, Read next SMS, Reply, Forward, Save to PhoneBk** are displayed.
2. Select **Reply** using .
3. Use to navigate to **Templates** (pre-designed short answers, Yes/No, Everything OK) or to **Original Text** to include it in your answer or to **Empty Page** and select it using .
4. Then press twice to send your answer to the sender.

4.2.5 Deleting SMS

Because a full SMS memory prevents the reception of further SMS, it must be deleted from time to time.

1. Press key. The menu will be displayed.
2. Use to navigate to **SMS Message** and select it with .
3. Use to navigate to **Delete SMS** and select it with .
4. Now you either delete the entire SMS memory by selecting **All SMS**, or you use to target only **Received SMS** and select them with .
5. Confirm the following prompt:
Delete all received SMS? by pressing .

You can also delete individual SMS messages: scroll down in a message, until you see **Delete SMS**, then press twice.

4.2.6 Sending Phone Book Entries via SMS

If the recipient of your SMS is also using a suitable mobile phone, the entry will automatically be saved in his or her phone book.

1. Press key. The menu will be displayed.
2. Use to navigate to **SMS Message** and select it with .
3. Use to navigate to **Send contact by SMS** and select it with .
4. Use to navigate to the entry you want to send and select it with .
5. Enter the telephone number or look up the name of the recipient and confirm it by pressing .

4.2.7 Creating and Inserting Templates

Templates are frequently used messages like **Please call**, or **Running late**, or **I love you**. Once made or selected from the template list they help save time when writing SMS messages. Existing templates can be changed before sending them. *(See below)*

Creating a new template

1. Press **⏏** key. The menu will be displayed.
2. Use **⏏** to navigate to **SMS Message** and select it with **⏏**.
3. Use **⏏** to navigate to **Templates** and select it with **⏏**.
4. Select **New Template** with **⏏**.
5. Write the desired text using the keypad.
6. Press **⏏** to save it as a new template.

Changing existing templates:

1. Press **⏏** key. The menu will be displayed.
2. Use **⏏** to navigate to **SMS Message** and select it with **⏏**.
3. Use **⏏** to navigate to **Templates** and select it with **⏏**.
4. Use **⏏** to navigate to the template you want to change and select it with **⏏**.
5. Use **⏏** to navigate to **Edit / Send Template** and select it with **⏏**.
6. Edit text with keypad and delete key (**⏏**) if needed.
7. Press **⏏** to go to the submenu.
8. Either send the changed template as SMS by pressing **⏏** or use **⏏** to navigate to **Save as template**.
If you want to use the new text as a template in the future, save it with **⏏**.

4.2.8 SMS Blacklist

If you do not wish to receive SMS from certain people or advertisers, you can block whole numbers, or area codes (for instance 0900).

1. Press key. The menu will be displayed.
2. Use to navigate to **SMS Message** and select it with .
3. Use to navigate to **SMS Blacklist** and select it with .
4. Select **Add Blocked No.** number with .
5. Enter the desired number or area code and confirm with .
6. Enter a name for this setting.
7. Save the setting with .

4.2.9 SMS confirmation

As soon as your SMS has been received, you will get a confirmation SMS. To de-activate or activate this service, proceed as follows:

1. Press key. The menu will be displayed.
2. Use to navigate to **SMS Message** and select it with .
3. Use to navigate to **SMS confirmation** and select it with .
4. Use to select **On** or **Off** and confirm with .

Please note: Most network providers charge for this service.

4.2.10 SMS Service Centre Number






Your network provider's central number for processing all short messages. Normally, this number is already saved on your SIM card, and you need not enter or change anything.

4.3 PHONE BOOK

The phone book allows you to save, change or search up to 500 numbers. The entries may be saved to the phone, or the SIM card. (See chapter 4.3.7)

Please note: We recommend saving your phone book regularly to a SIM back-up (available in stores, for instance as key pendants). If you should lose your telephone, or your SIM card, you still haven't lost all your phone book entries.



4.3.1 New phone book entry: Saving names and numbers

1. Press  key. The menu will be displayed.
2. Use  to navigate to **Phone book** and select it with .
3. Use  to navigate to **Add contact** and select it with .
4. Enter the number including area code using the keypad.

Example: "01509876543".















Suggestion: Always store the number including the international country code. Example "+441509876543"

Please note: Enter + by pressing  twice.

5. Press  to continue.
6. Enter the name on the keypad.
7. Save it by pressing .


*Please note: You will be prompted to save the number of every incoming or outgoing call which has not previously been saved to your phone book. You can de-activate this function in the menu under **Phone book / PhoneBk settings / Auto store in PhoneBk**.*

4.3.2 Editing phone book entries

1. Press  key. The menu will be displayed.
2. Use  to navigate to **Phone book** and select it with .
3. Use  to navigate to **Edit contact** and select it with .
4. Use   or the keypad to navigate to the entry to be edited, and select it with .
5. If necessary, correct the name using the keypad, or press  to delete a sign.
6. Continue with .
7. Using the keypad, or  to delete, correct the telephone number. To move through the individual numbers of a particular entry use  .
8. Use  to save the edited entry.

4.3.3 Name Search

You may select a number from the phone book list and call it.


Press , to access **Phone book** in standby mode or via the menu **Phone book / Search name**.

- Search for a phone book entry by entering one or more letters of the name on the keypad.
- The phone will find the entry, even if you have saved it as given name and surname (separated by a space), and are searching for the first name or the surname.

Phone book



Enter one first letter

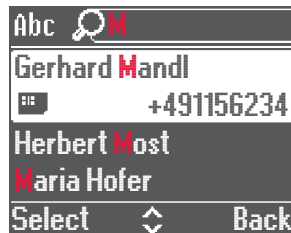

Enter several letters



Press  to call the selected number.

4.3.4 Top 5: The five most important numbers

Your five most important numbers can be placed at the beginning of the phone book list, regardless of their alphabetical order.

Press and hold **1** for your Top1 entry, the number is dialled;

Press and hold **2** for Top2, and so on ...

or press to open **Phone book** and call Top1 with .

To determine the Top5, proceed as follows:

1. Press key. The menu will be displayed.
2. Press to navigate to **Phone book** and select it with .
3. Press to navigate to **Top5** and select it with .
4. Press to navigate to **Add Top5** and select it with .
5. Press to select **Top1**.
6. Use or the keypad to navigate to the desired phone book entry, and select it with . A list of previously saved Top5 numbers will be displayed briefly.
7. For other important numbers, repeat the previous steps as needed.

Please note: Only an existing phone book entry may be selected for Top5.

4.3.5 Saving telephone numbers from Call lists or SMS to the Phone book

Call lists:

You have opened a call list, and want to save a number in your phone book.

1. Use to navigate to **Save to PhoneBk** at the end of the call list and select it with .
2. Use to navigate to the desired number and select it with .
3. Enter a name and save it with .
4. If necessary, correct the number with and save it with .

SMS:

1. Use to navigate to **Save to PhoneBk** at the end of the SMS and select it with .
2. Use to navigate to the desired number and select it with .
3. If necessary, correct the number with and save it with .
4. Enter a name and save it with .

4.3.6 Fixed dialling numbers

You can restrict the numbers that can be called to prevent unwanted usage of your mobile phone. Although numbers which are not **Fixed dialling numbers** are visible in your phone book, they cannot be dialled.

Note: To add or delete numbers from the secure number list the PIN2 code is required. The PIN2 code can be found in the documents of your network operator, which you received with your SIM card.

Activating secure numbers:

1. Press key. The menu will be displayed.
2. Use to navigate to **Phone book** and select it with .
3. Use to navigate to **Fixed dialling numbers** and select it with .
4. Press to select **On/Off**.
5. Enter the PIN2 code using the keypad and confirm it with .
6. Use to select **On** and confirm with .

Adding secure numbers:

1. Press key. The menu will be displayed.
2. Use to navigate to **Phone book** and select it with .
3. Use to navigate to **Fixed dialling numbers** and select it with .
4. Use to navigate to **Add fixed number** and select it with .
5. Enter the PIN2 code using the keypad and confirm it with .
6. Enter the telephone number using the keypad or search in the phone book or amongst unsaved numbers. (Chapter 4.3.3, or 4.2.2)

Deleting secure numbers:

1. Press key. The menu will be displayed.
2. Use to navigate to **Phone book** and select it with .
3. Use to navigate to **Fixed dialling numbers** and select it with .
4. Use to navigate to **Delete fixed number** and select it with .
5. Enter the PIN2 code using the keypad and confirm it with .
6. The list of saved secure numbers is now displayed.
7. Use to navigate to the entry you wish to delete , and select it with .

Note: If Fixed dialling numbers has been activated, you can still view the entries in the telephone memory or the list of secure numbers. Contacts which are saved on the SIM card cannot be viewed.

4.3.7 Phone Book Settings

Save entry on

- **SIM Card:** You may transfer your phone book list to another mobile phone, or
- **Phone:** Your phone book list stays in your phone when changing SIM cards.

Memory in use determines if you are opening a phone book entry from SIM memory, phone memory, or from both locations.

Memory Status shows you how much memory has been used on your SIM card or in your phone.

Auto store in PhoneBK allows you to automatically store unsaved numbers in your phone book. You will be prompted to save the previously unsaved number of any incoming or outgoing call.

4.3.8 Accessing the Phone book via SMS



To save you from entering new telephone numbers into the phone book, you can delegate this job to family, friends and acquaintances.

(See chapter 2.8.)

4.4 SETTINGS

If you want to change settings (for instance the alarm, ringer volume, display contrast . . .) this is the section to read.

1. Press  key. The menu will be displayed.
2. Use  to navigate to **Settings** and select it with .

Please note: The current setting is indicated by a checked box (). A new setting is indicated by a bar. Save the new setting with  or leave the old one by pressing .

4.4.1 Silent/Sleep, Meeting/Theatre, or Maximum/Bus

In situations where a ringing phone may be frowned upon (in a restaurant, theatre or cinema for example), your phone has the functions **Silent/Sleep** and **Meeting/Theatre**.

If you turn on the **Silent/Sleep** function, all signal tones of your mobile phone will be de-activated (ringer, vibrator, key tones, SMS tone and confirmation signals). Only your alarm will still ring. This allows you to sleep restfully without being disturbed by any calls.

To ensure you don't forget to deactivate **Silent/Sleep** mode again (e.g. after a concert) and thereby make yourself unavailable, you can easily set after what time (**1-24 hours**) the ring tone of the telephone should be automatically turned back on (= switch off silent mode). This setting is also possible for the **Meeting/Theatre** function.

Choose the **Meeting/Theatre** function (in **Sound & alert**), when you want to be alerted to a call or a message (by the vibration alarm), but don't want others to notice – if you are sitting in a meeting, or in the theatre. Instead of ringing, your phone will beep twice and vibrate for 10 seconds. SMS and alarm will only cause the phone to vibrate.

If you select the **Maximum/Bus** function (in **Sound & alert**), the ring tone will be set to maximum volume and sound together with the vibration alarm. Receiver volume, key tones, SMS tone and confirmation signal are also set to maximum volume. Use this setting if you are in noisy surroundings, for instance on a bus.

4.4.2 De-activate PIN Prompt

See chapter 1.6

4.4.3 SMS in Phonebook

Here you can determine who may send you phone book entries by SMS.

(See chapter 2.8)

On: Anyone may send you phone book entries by SMS.

They will be stored automatically in your phone book.

Off: No one can send you phone book entries.

However, entries will be displayed as SMS.

Only from PhoneBk: Only entries of addresses stored in the phone book will be accepted. Messages received from unsaved addresses will be displayed as SMS.

4.4.4 Birthday reminders

You can save birthday reminders.

Save birthday reminders.

1. Press key. The menu will be displayed.
2. Use to navigate to **Settings** and select it with .
3. Use to navigate to **Birthday reminder** and select it with .
4. Use to navigate to **New birthday** and select it with .
5. You can either save a birthday for contacts already in your Phone book (**From Phone Bk**) or new contact (**Enter name**).
Use to select and confirm with .

From the Phone book:

5. The phone book now appears on the screen.
6. Use to navigate to the desired contact and select it with .

Enter the name:

5. Enter the name of the person using the keypad.
 6. Save with .
 7. Enter the birthday in the format dd.mm.yyyy and confirm with .
 8. Enter the time for the reminder in the format hh:mm and save with .
- The birthday is now saved. You will receive a reminder at the stated time.

Reminder function when a birthday is approaching:

1. A reminder appears for the birthday at the predetermined time.
2. If a telephone number has been stored with the birthday, this can be called immediately by confirming **Yes** with .
3. If you confirm **No** with , the birthday reminder is cancelled.

4.4.5 Phone Book settings

See chapter 4.3.7

4.4.6 Top 5: The most important numbers

See chapter 4.3.4

4.4.7 Voicemail number

If you press and hold the **[0]** key for 3 seconds, you will be connected automatically with your voicemail.

In case this number is not stored in your phone or on your SIM card, you will be prompted to enter the number. If you do not know the number, call the network provider hotline free of charge.

Don't worry, it is very simple, and makes using your voicemail much more convenient afterwards.

4.4.8 SMS Service centre number

See chapter 4.2.10

5 MENU OVERVIEW




- SMS Message**
- Write new SMS
 - Received SMS
 - Sent SMS
 - Unsent SMS
 - Templates
 - Delete SMS
 - Send contact by SMS
 - SMS Blacklist
 - SMS in PhoneBk
 - SMS confirmation
 - Service Centre No. for SMS

- Phone book**
- Search name
 - Add contact
 - Edit contact
 - Delete contact
 - Send contact by SMS
 - Copy contact
 - Top5
 - Fixed dialling numbers
 - Own number
 - Mailbox number
 - PhoneBk settings
 - SMS in PhoneBk

- Delete SMS**
- All SMS
 - Received SMS
 - Sent SMS
 - Unsent SMS
 - Templates

- PhoneBk settings**
- Save entry on
 - Memory in use
 - Memory status
 - Auto store in PhoneBK

- Top 5**
- Add Top5
 - Change sequence
 - Exchange Top5
 - Delete Top5

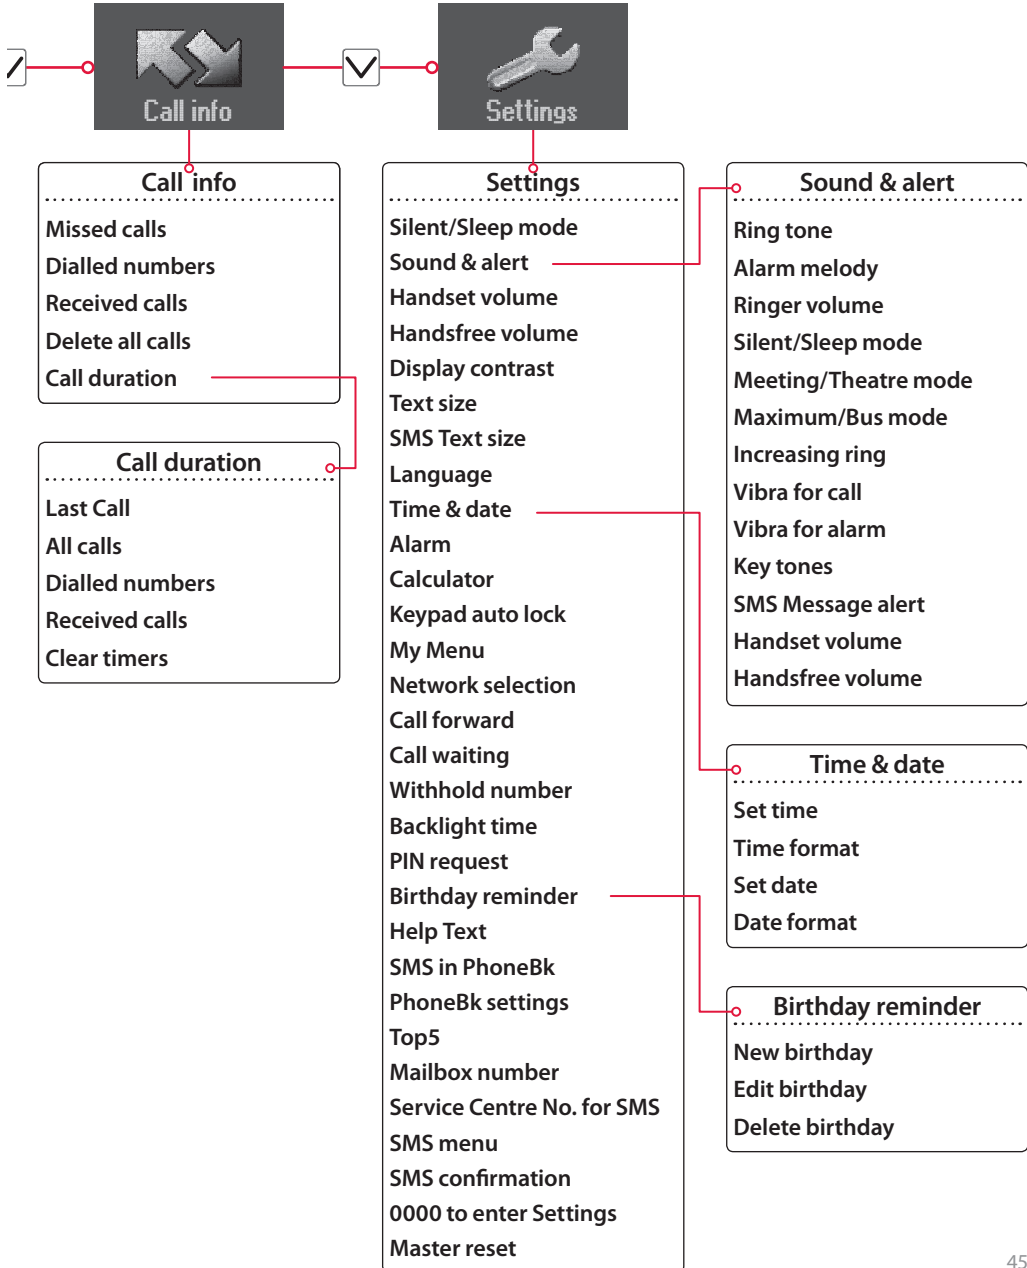

6 PRODUCT AND SAFETY INFORMATION



Read the Safety Information section of this user guide on page XX



Do not use hand-held while driving



For body-worn operation maintain a separation of 1.5 cm



Small parts may cause a choking hazard



This device may produce a loud sound



Keep away from pacemakers and other personal medical devices



Switch off when instructed in hospitals and medical facilities



Switch off when instructed in aircrafts and airports



Switch off in explosive environments



Do not use while re-fuelling



This device may produce a bright or flashing light



Do not dispose of in a fire



Avoid contact with magnetic media



Avoid Extreme Temperatures



Avoid contact with liquid, keep dry



Do not try and disassemble



Do not rely on this device for emergency communications



Only use approved accessories

6.1 RF EXPOSURE

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0,677 W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

*The tests are carried out in accordance with EN 50360:2001.

** Please see next chapter about body worn operation.

Body worn operation

Important safety information regarding radiofrequency radiation (RF) exposure:

To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 1.5 cm separation from the body.

Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

Limiting exposure to radio frequency (RF) fields

For individuals concerned about limiting their exposure to RF fields, the World Health Organisation (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using 'hands-free' devices to keep mobile phones away from the head and body.

Further information on this subject can be obtained from the WHO home page <http://www.who.int/peh-emf> WHO Fact sheet 193: June 2000.

Regulatory information

The following approvals and notices apply in specific regions as noted. See next page.

6.2 DISTRACTION

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) causes distraction and can lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

EG-KONFORMITÄTSERKLÄRUNG
EC-DECLARATION OF CONFORMITY

Hiermit erklären wir, Emporia Telecom Produktions- und Vertriebs-GmbH & Co.KG., dass die Bauart des nachfolgend bezeichneten Gerätes den unten genannten einschlägigen EG-Richtlinien entspricht.
We, Emporia Telecom Produktions- und Vertriebs- GmbH & Co. KG. declare under our sole responsibility that the following product is in conformity with the following relevant harmonised standards.

Artikelbezeichnung: Dual Band Mobile Phone

Artikelnummer: VF1

Kind of Product: Dual Band Mobile Phone

Article number: VF1

Einschlägige EG Richtlinien / *Governing EU-regulations:*

Funkanlagen/Telekommunikationseinrichtungen 1999/5/EG

R & TTE Directive 1999/5/EC

Council Directive R&TTE 1999/5/EC on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.

CE 2200

Harmonisierte EN-Fach- und Grundnormen / *Harmonized EN-standards:*

Der Artikel entspricht folgenden Normen:

Sicherheit / *Safety:* EN 50332-1:2000
EN 60950-1:2006 + A11 :2009

Gesundheit / *Health:* EN 50360:2001
EN 62209-1:2006

EMC: EN 301 489-1 V1.8.1
EN 301 489-7 V1.3.1
EN 301 489-17 V1.3.2
EN 55013 :2001
EN 55020 :2007

Radio Spectrum: EN 301 511 V9.0.2

Signed:

Eveline Pupeter
General Manager



Date of Issue: 20.10.2010

Place of Issue: Linz/Austria

6.3 PRODUCT HANDLING

This mobile phone is robust and designed for mobile operation. However, it must be protected from moisture (rain, bath...) and impact. Do not expose it to direct sunlight.

Any utilization other than described above will cause damage to the device, and may be hazardous (electric shock, fire, etc.). The entire product must not be altered or rebuilt, and the housing must not be opened.

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorised personnel must do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum 0° and maximum +40° Celsius.
- Please check local regulations for disposal of electronic products.

Do not carry your phone in your back pocket as it could break when you sit down.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it. They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or which could become detached and create a choking hazard.

Demagnetisation

To avoid the risk of demagnetisation, do not allow electronic devices or magnetic media close to your phone for a long time.

Electrostatic discharge (ESD)

Do not touch the SIM card's metal connectors.

Power supply

Do not connect your device to the power supply or switch it on until instructed to do so in the installation instructions. The power plug is suitable only for use with residential-type outlets of the public mains with 230 Volt / 50 Hz (10/16A) alternating current.

Antenna

Do not touch the antenna unnecessarily. Antenna location see page 5.

Indoor usage

This product is only suitable for indoor usage.

Normal use position

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth or as you would do with a fixed line phone.

Air Bags

Do not place a phone in the area over an air bag or in the air bag deployment area. Store the phone safely before driving your vehicle.

Seizures/Blackouts

This phone is capable of producing bright flashing lights.

Repetitive Motion Injuries

To minimise the risk of RSI, when Texting or playing games with your phone:

- Do not grip the phone too tightly
- Press the buttons lightly
- Make use of special features in the handset which minimise the number of buttons which have to be pressed, such as message templates and predictive text
- Take lots of breaks to stretch and relax

Emergency Calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud Noise

This phone is capable of producing loud noises which may damage your hearing.

Bright Light

This phone is capable of producing flash of light or use as a torch, do not use it too close to the eyes.

Phone Heating

Your phone may become warm during charging and during normal use.

6.4 ELECTRICAL SAFETY

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit the battery terminals.

Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessory.

Only qualified personnel must service or repair the phone or its accessory.

If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorised service centre.

6.5 BATTERY HANDLING & SAFETY

Always switch the device off and disconnect the charger before removing the battery.

Only use the battery and charger supplied, or manufacturer approved replacements intended for use with your phone. Using other batteries and chargers could be dangerous.

Do not disassemble or short-circuit the battery. Accidental short-circuiting can occur if a metallic object such as a key, paper clip, or pen touches the terminals of the battery.

Improper battery use may result in a fire, explosion, or other hazard. If you believe the battery has been damaged, do not use it, take it to a service centre for testing.

6.6 INTERFERENCE

Mobile phones may cause interference in TV sets or radios, particularly when the handset is used close to such a device.

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference.

You may also consult your hearing aid manufacturer to discuss alternatives.

Medical devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff. Consult the airline staff about the use of wireless devices on board the aircraft, if your device offers a 'flight mode' this must be enabled prior to boarding an aircraft.

Interference in cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a handsfree kit with an external antenna is included in the installation.

6.7 EXPLOSIVE ENVIRONMENTS

Petrol stations and explosive atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Turn off your mobile phone or wireless device when in a blasting area or in areas posted turn off "two-way radios" or "electronic devices" to avoid interfering with blasting operations.

6.8 WARRANTY

The 24 month warranty period begins with the delivery of the device.

Verify the delivery date with the **original receipt** (invoice, cash receipt) **with IMEI number**.

Store these documents carefully. The extent of our warranty is based on the warranty conditions in effect at the time of delivery.

To the greatest possible extent under current law **emporia** will not be liable under any circumstances for the following situations:

- Any loss of data or income
- Any particular or incidental damages, as well as any consequential or collateral damages, in whatever way these might have been caused.

6.9 DISPOSAL

- Disposal of packaging: Packaging and packaging materials are recyclable and should always be returned.
- Disposal of batteries: Batteries must not be disposed of with domestic rubbish! As a consumer you are required by law to recycle used batteries. You may return the battery local collection point or to the dealer.
- Disposal of the device: Do not throw your mobile phone into the garbage, once it has outlived its usefulness. For the benefit of the environment, take it to a recycling location for used phones so it can be processed in an environmentally responsible way.



6.10 TECHNICAL PRODUCT DESCRIPTION

- Hearing aid compatible loudspeaker
- Dual band GSM 900/1800
- Dimensions: 109 x 50 x 14 mm, 92 g
- Display: 1.7" OLED 160 x 128 Pixels
- Operating temperature: 0 - 40°C
- Battery AK - RL1: Li-Ion 3,7V / 700 mAh
- Stand-by-time: up to 200 h
- Talk time: up to 150 Min.
- Internal antenna, SAR 0.677 W/kg
- Charger RL - V170EU (In: 110-240V~ Out: 5,0V---500mA)
- Desktop charger: TL-RL1 (In: 5,0V---500mA Out: 5,0V---500mA)
- Flashlight – Protection class 3

7 FREQUENTLY ASKED QUESTIONS

What do I have to pay for?

You will begin to be charged for a phone call you initiated once someone (or your voicemail) has answered on the other end. When you use the SMS function, you will only be charged for sending the SMS, not writing or receiving it.

Any other functions (alarm, calculator) are free of charge.

Calling Abroad

If you are outside the coverage of your own network provider, your mobile phone will automatically find another network. Many phone cards will need to be enabled by your network provider for usage abroad. Please contact your provider.

Can I make an emergency call without reception or credit balance?

- Without signal you cannot make a call (**no service**).
- If **Limited Service** is displayed, you either have no connection to your network provider, or no credit balance. In this case you can place an Emergency 999 call, but no other calls.

How often should I charge my battery pack?

Don't recharge your batteries after every call. Even with "intelligent" electronic chargers this will result in reduced battery capacity.

To keep your batteries "fit", let them deplete completely at least once a month. If you are not using the mobile phone for more than one month, remove the battery pack.

How long will my phone work until I have to charge it again?

The operating time depends among other things on the distance from the transmitter (if you are far away from it, the mobile phone needs a lot more energy to maintain contact), on the number of calls, and the volume setting. Under optimal conditions the batteries will last for 2.5 hours of calling. In standby mode you may count on an maximum operating time of 200 hours. If you have been on the phone for 1 hour, the standby time is reduced to 120 hours.

If the signal strength (reception) of your network varies strongly or fails altogether at a particular location, your mobile phone is continuously forced to search for an available network. This increases power consumption, and consequently depletes your batteries faster.

How do I clean the mobile phone?

Clean the device with a damp cloth. Avoid sprays and too much moisture. It might get into the interior of the device and cause damage. Never use cleansers containing abrasive materials, alcohol, or solvents (turpentine). They might damage the housing and/or printed surfaces.

What is the standby mode?

You can receive calls and see the time display. If key lock is engaged you will see a large key symbol instead of the time (*see section 3.4*). If the phone is in energy saving mode, the display shuts off, but the phone remains ready to receive calls.

Did I select this function, or not?

Your current setting is indicated by the checked box (☑).

The new setting is indicated by a bar.

Save the new setting with  or keep the old setting with .


My call didn't go through:


- Make sure you have the correct number and area code.
- Did you remember to include the area code even for a local call?

SIM card inserted! Only emergency call 999 works!

- Check to make sure your SIM card is correctly inserted!
- Gold contacts on the bottom? Clipped corner back left?
- Remove SIM card and insert it again.

The screen of the mobile phone is empty (display turned off):

Your phone is in energy saving mode and has turned off the display (you can receive calls), press  - the display will come on again.

The phone may be switched off (press and hold the  key on the left-hand side of the mobile phone for 2 seconds to switch it back on).

The screen of the mobile phone is black

The device is switched on, you hear key tones, but can't see anything on the screen.

The screen may be broken – have device serviced.

The mobile phone doesn't turn on

Remove the battery pack, insert it again, and switch the device on.

The phone doesn't charge

Leave the mobile phone connected for at least 10 minutes. If it does not begin to charge (battery symbol displayed) contact your service centre, as the battery or the charger may be defective.

Is it possible to hide my number?

If you don't want your telephone number to be seen by the other party, go to the menu and select **Settings / Withhold number / Yes**.

There is fluid leaking from the battery pack

Please make sure the fluid doesn't come in contact with skin or eyes.

If this should happen, immediately rinse the area with water.

To be completely safe, contact your doctor.

The battery pack is damaged

This may happen, for instance, if the mobile phone or the battery pack fall on a hard surface. Stop using the battery pack, and let a service professional determine if the batteries may be used again.

Emporia Telecom Produktions-
und Vertriebs-GmbH & CoKG

Industriezeile 36
4020 Linz, Austria

fon +43.732.77 77 17-0

fax +43.732.77 77 17-8

www.emporia.at

Emporia Telecom Hotline:

Deutschland: 0 180·59 13 181

Österreich: 0 732·77 77 17·446

Schweiz: 08484·50004

CE 2200

Subject to print errors, mistakes and technical changes.
PartNo.: 54376-ENG; ENGLISH; VF1-IM_ENG-V2_G2-201102