



PowerTel M7000 mobile phone

Operating
Instructions





HAC Hearing Aid Compatible to M4 / T4 Rating

The M7000 Phone has a built in Induction Coil and is hearing aid compatible.

To ensure optimum benefit, users with hearing aids may wish to select the T setting on their hearing aids.

Exposure to the receiver at full volume for a long period could cause ear damage.

Helpline 0844 800 6503

(See page 69 for costs and hours of operation)


Quick Start Guide	2
The phone in details	14
Using the phone	20
“Phonebook” menu	28
“Messages” menu	35
“Call center” menu	40
“SOS” menu	47
“Settings” menu	52
“Organizer” menu	63
“Services” menu	67
Appendix	68
Index	82
Menu tree	86

Quick Start Guide

Important: Before you start, please read the safety information on page 74.

Quick Glance

- | | |
|----------------------------------|---|
| 1 Earpiece | 13 Boost key/
Flashlight key |
| 2 Display | 14 Volume control |
| 3 Left softkey | 15 LED Charging/Low battery |
| 4 Navigation key | 16 LED New calls/New SMS |
| 5 Call key | 17 LED Flashlight/Incoming
call |
| 6 Direct call keys
M1, M2, M3 | 18 Emergency call switch |
| 7 Keypad | 19 Loudspeaker |
| 8 Star key | 20 Headset socket (Headset
not supplied) |
| 9 Hash key | 21 Mini-USB charging socket |
| 10 Microphone | |
| 11 End call key /
On/Off key | |
| 12 Right softkey | |

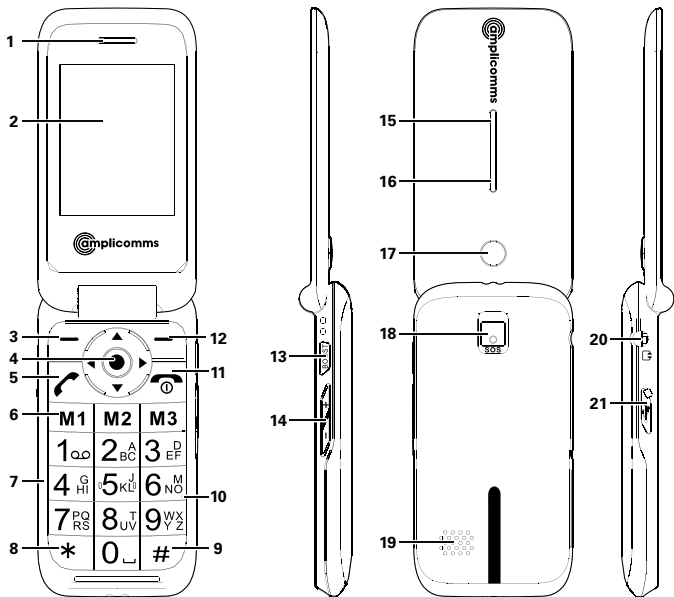

What is in the box

The box contains:

- | | |
|-------------------------|----------------------|
| 1 mobile phone | 1 power adapter plug |
| 1 li-ion battery | 1 operating manual |
| 1 desktop charging unit | |

Installing the SIM card and battery

Risk of swallowing small objects!

The SIM card can be removed.


Small children can swallow them.

Pay attention that the SIM card is not bent or scratched. Prevent any contact with water, dirt or electrical charges.

Your telephone number is carried by the SIM card, not the phone. Therefore if you use a SIM card you had in a previous phone, you will keep the same phone number.

- Switch the phone off.
- Remove the battery cover by grasping the small recess in the housing (near the speaker) and lift the rear housing cover.

- If there is already a battery inside, remove it.
- Slide the SIM card with the golden contacts facing down in the moulded SIM card holder. The SIM card must be located under the metal retaining bar to be in the correct position.
- Insert the battery. The golden contacts on the battery must face towards the bottom right.

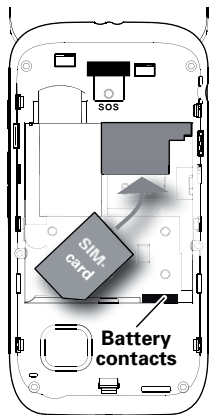

Press lightly on the top end of the battery until it snaps into place.

- Locate the battery cover on the back of the phone and secure it by gently pressing around the edges until it clicks into place.

Charging the battery

- Before starting to charge the battery, check that it has been installed properly. Do not remove the battery while it is being charged. This could damage the phone.
- When charging the battery for the first time, it should be charged for at least 4 hours. Some batteries only reach their full capacity after several complete charge/discharge cycles.

Charging via the mini USB charging socket

- Plug the power adapter in the mini USB charging socket.
- Connect the power adapter plug. For safety reasons, only use the power adapter plug supplied.


Charging via the desktop charging unit

- Plug the power adapter plug in the mini USB charging socket on the charging unit. Insert the phone in the charging unit to charge it.

Some SIM cards will require you to enter a PIN code. Follow the prompts on the screen.

The SIM code (PIN of the SIM card) that you received with your SIM card, protects the SIM card against unauthorised use. The PIN2 code supplied with some SIM cards, you need to access certain services. If you enter the PIN or PIN2 code incorrectly three times in a row, you will be prompted to enter the PUK or PUK2 code. Check with your provider if you do not know these codes.

Make sure you are in range of your Network

Some networks offer better coverage than others in different areas. The icon  indicates you have a signal and are connected to the network. The network will also appear in the display.

Setting the display language

If you want to select a different language please refer to page 57. There are different languages available.

Setting the time and date

Refer to page 56.

Taking a call



Take the call

Rejecting a call



Reject the call

Ending a call



End the call

Making a call

Enter the phone number

Clear

Delete the last digit if incorrect



Dial the phone number

Advanced Settings and Functions

For more details about setting up your Amplicomms M7000 and other functions follow the descriptions in this user guide.

Examples:

- Set your one-touch dialling keys -> page 33.
- Store numbers in the phone book -> page 28.

Questions and Answers

In the majority of cases your M7000 phone is supplied without a SIM card. You may find the following “Questions and Answers” (Q & A) helpful.

Why hasn't the mobile phone been supplied with a SIM card?

Many people already have a mobile phone and wish to transfer their existing SIM card over to the new phone. This has the advantage of keeping the same telephone number and if the card is subscribed to a Pay-as-you-go service then you also benefit from being able to carry over any credit that has been paid on the card.

Where can I get a SIM card from?

Any high street mobile phone shop will be able to provide

you with a SIM card. Some of the major supermarket chains also provide mobile phone services and can supply a SIM card. A useful tip when choosing a SIM card / service provider however is to make sure that you have adequate signal coverage at home; this is particularly important if you live in a very rural area.

Why doesn't the mobile phone have a telephone number?

The telephone number is supplied by the service provider and will be registered onto the SIM card.

Can I use the SIM card from my old mobile phone?

Yes as long as the SIM card is less than three years old you can transfer the card over. Some old SIM cards however are not compatible with the Amplicomms mobile phone as they are from an earlier generation of SIM card design.

Can I use a SIM card from any mobile phone company?

Yes. The Amplicomms mobile phone is what is termed as

an open SIM card phone and so it is not restricted to any particular service provider or mobile phone company.

How do I pay for my calls?

There are two main types of registration with a service provider or mobile phone company. One is a contract – this is where you sign up for an agreed contract over several months / year and pay an agreed monthly fee.

This is more suited to people who are using their mobile phone as part of their job for example. The other is Pay-as-you-go, sometimes abbreviated to PAYG. With this type of service you add credit to the card and top up as and when required. Topping up the card is easy, you can do this over the phone, on-line, at many shops and even some cash points allow you to do this. PAYG is more suited to less frequent users.

How do I find out my credit balance?

The service provider of the SIM card should have provided an information pack with the card. This will give

details of a short number to dial in order to check your balance. These access codes differ between mobile phone companies so please check the details specific to your service provider. Key in your number, press the talk button and the credit balance will be announced to you.



The phone in details

Keys and Parts

for the explanation of keys and parts please refer to page 2.

Special key functions

Left softkey

In standby -> open the main menu
In menus the function changes due to the term in the display above the softkey (e. g. **OK**).

Right softkey

In standby -> open the phonebook
In menus the function changes due to the term in the display above the softkey (e. g. **Back**).

Direct call keys

M1, M2, M3 - pressing one of these keys dials the assigned phone number. A phonebook entry can be assigned to each one-touch dialling key (refer to "Storing a phonebook entry



to a one-touch dialling key“ page 33).

Note: Since this operation only requires a short press of a button, it could lead to unintentional dialling.

Call key

- Take a call or dial a number.
- Open the call list and the redial list

End call key

- End or reject a call
- Cancel the current process and return to standby (in menus)
- Switch the mobile phone on and off

Navigation key

Navigate through the menu.

In standby the navigation key offers a quick access to specific menu items that you can define yourself (refer to page 58). The default settings are as follows:

- ▲ - Shortcuts: Quick access to important settings.



- ▼ - Alarm: Setting an alarm time.
- ◀ - User profiles: Activation/Customisation of a user profile.
- ▶ - Tone settings: Settings for ringtone, alarm tone etc.
- ⊙ - red button in the centre of the navigation key
 - In standby: open the menu
 - In menus: function **“OK”**.

Digit key 0

In idle mode, long press (approx 3 s) to toggle the tone control setting between “Low frequency”, “High frequency” and “Normal frequency”. (See page 55 for explanation of tone control).

Digit key 1

Long press (approx. 3 s) dials the number to access your voice mail messages.



Note: If prompted, it may be necessary to enter your network's voice mail number first. Refer to the documentation supplied with your SIM card for this number.

Star key

- to enter the international prefix “+” in pre-dialling (press 2 times) or to enter P (pause)/ W (wait) (may be necessary for call-through numbers or remote accessing an answering machine).

- when entering text: open the special character table.

Hash key

- In standby: long press toggles between selected user profile and silent mode.

- when entering text: toggles between case and numbers.



Volume control

+/- keys: - In standby: adjusts the volume level of the key tone
- Whilst on a call -> adjusts the ear-piece or Hands-free volume.

Boost key

In standby: press and hold for approx. 2 sec to switch the torch on/off

- In a call: press to toggle between boost and normal volume.

SOS key

Start the SOS sequence. For details please refer to page 49.

Icons in the display



Signal strength of the phone's connection



Battery capacity (refer to page 7)













New SMS



New call



-  Call forwarding active
-  Alarm is activated
-  Boost is activated
-  Profile "General" is activated
-  Profile "Outdoor" is activated
-  Profile "Indoor" is activated
-  Profile "Meeting" is activated
-  A headset is connected
-  Bluetooth is activated
-  The "Roaming" symbol will appear if the phone switches to an alternate network provider. This may occur for example when entering another country. The Roaming facility depends on your network provider. Call your network provider if you have any queries regarding this service.



Using the phone

General

All the functions can be accessed via the various menus.

- Use the arrow keys ▲ /▼ to scroll through the menus and the lists (e. g. phonebook).
- Press **Back**, to return to the last step.
- Press **OK**, to get to the next step.
- When entering text (e. g. phonebook or SMS) use the # key to toggle between smart input (●zi ABC or ●zi abc), uppercase letters (ABC), lowercase letters (abc), words beginning in size (Abc) or numbers (123).
 - **Smart text input** is based on a built-in dictionary. Start writing a word, using the keys 2 to 9. Press each key only once for one letter. Confirm a word by **Select** or by adding a space (press **0**). If the word is not correct, press ◀ or ▶ repeatedly, and select the word from the list. When you do not find the correct letters between ◀ and ▶ press **Clear** until you find



the first letters are OK, then press **Select**, then continue by typing the next letter key, if this is incorrect use the option bar at the bottom of the screen which should have appeared, showing individual letters and characters then press choose a letter and press **Select**. Repeat this procedure for the next letter if necessary. If you still cannot get the correct word, Long press * button and you can temporarily toggle the input method from Smart ABC/abc to plain ABC/abc.

NOTE: If you wish to include a numeric character you can do this by pressing and holding the appropriate numeric key down for 3 seconds.

- In order to enter text in **Multitap** mode, press the key labelled with the corresponding letter/character. If the first character of the group is required, press the key once. If the second character is required, press it twice, and so on. To enter two characters assigned to



the same key, press the key the respective number of times to enter the first character. Then wait for approx. 2 sec. and enter the second letter.

- Use the arrow keys ▲ /▼/ ◀/▶ to place the cursor and press **Delete** for deleting characters.

Important Note: If the display light turns off, any key-stroke activates only the light again. You must press the desired button a second time to perform the function.

Switching the mobile phone on and off

Switch off: Press and hold the red end call key. After a few seconds the telephone will be switched off.

Switch on: Press and hold the red end call key until the display light will be switched on. Enter the PIN code for your SIM card and press **OK**. Entering the PIN code is not required if this feature is switched off for your SIM card (refer to page 60 “SIM lock” / not available for every provider).



Using the torch

Switch on: Press and hold the boost key in standby for approx. 2 sec.

Switch off: Press and hold the boost key in standby for approx. 2 sec.

Note:

- The light is generated by a high-power LED. Do not shine directly into eyes or optical devices.
- Please remember that by the operation of the torch, the operating time to the next charging of the phone is shortened.

Dialling a phone number / Calling

- The phone must be in standby (SIM card inserted and the phone switched on).
- Enter the telephone number incl. the prefix. For entering a + in front of the country prefix press * quickly two times.



- Press the green call key to dial the phone number.
- Press the red end call key for ending the call.

Dialling with the speed dialling keys

- Make sure, a phone number is assigned to the respective key. Press the desired digit key for approx. 3 seconds. Each stored number is dialled. To program the speed dialling keys see "Storing a phonebook entry to a speed dialling key," page 32.

Dialling with the one-touch dialling keys

- Make sure, a phone number is assigned to the respective key. Press the desired one-touch dialling key. Each stored number is dialled. To program the one-touch dialling keys see "Storing a phonebook entry to an one-touch dialling key," page 33.

Using redial / using the Calls list

- In standby press the green call key. A list of the last calls is shown (Missed calls, dialled calls, received



calls). Select an entry using the arrow keys ▲ /▼.

- Press the green call key to dial the selected phone number.

Taking a call

- If your phone is ringing press the green call key.
 - Press the red end call key to reject the call. The caller gets the busy tone (depending on your provider).

Use the right softkey to switch off the ring tone (“Silent”). After this you can reject the call by pressing the right softkey (“Reject”).

Pressing the left softkey you have the following **options:**

- Answer -> take the call
- Deflect -> deflect the call to a different phone number.



Setting the volume

- During a call you can set the volume using the + / - keys on the right hand side of the phone. The setting will be saved.

Hands-free

- During a call press **H-Free**. You can hear the caller via the loudspeaker.
- For switching off press **H-Held**. The loudspeaker will be switched off.

Muting the microphone

- During a call press **Options**, select **Mute** and press **On**. The microphone will be muted.
- To unmute press **Options**, select **Mute** and press **Off**.

3-party conference

“3-party” is a provider dependant feature. Establishing a 3-party conference lets you talk to two subscribers simultaneously.



- Call the first subscriber.
- Press **Options**, select **New call** and press **OK**.
- Enter the phone number for the second subscriber or press **Options** and **Phonebook**, to select a phonebook entry.
- Press **Options**, select **Call** and press **OK**.
- When the second subscriber answers, press **Options**, select **Conference** and press **OK** to establish the 3-party conference.

"Phonebook" menu

You can save names and phone numbers in the internal memory (up to 500 entries) and on the SIM card.

Opening the phonebook

- In standby press **Names**
- or
- During a call press **Options**, select **Phonebook** and press **OK**.

Checking the memory status

For checking how many names and phone numbers are stored in the phonebook press **Names** -> **Options** -> **Phonebook settings** -> **OK** -> **Memory status** -> **OK** . The status of the SIM and phone memory is displayed.

Creating a new phonebook entry

- Press **Names** -> **Options** -> **Add new contact** -> **OK**.
- Select whether the new entry should be stored to the phone's memory or to the SIM card and press **OK**.

Please note: If you selected "SIM card" you can only enter the name and one telephone number.

- Enter the name and press ▼.
- Enter the (first) phone number and press ▼.
- If necessary enter additional phone numbers (Home number/Office number). After every input press ▼.
- Assign a ring melody to the entry. Use ◀ and ▶ to select a melody. Select **Rec Ring** to record a personal ring tone or speak any text to the telephone's microphone. Your recorded words will be used as ringtone for this entry. For doing this press the red button in the centre of the navigation key, press **Options** -> **New record** -> **OK** or press the red button in the centre of the navigation key again.

Further options:

- **List** -> Opens the list of recorded ring tones. Press Options to playback, delete etc.

"PHONEBOOK" MENU

- Press **Options** -> **Done** -> **OK**. Press **Yes** in the following confirmation query.

Note: Your personal ringtone
You can record e. g. "Peter is calling" as a ringtone. Did you associate this ringtone to phonebook entry "Peter", your phone will announce calls from Peter with: "Peter is calling".

Calling from the phonebook

- Press **Names** to open the phonebook.
- Select an entry using the arrow keys or enter the first letter for the entry.
- Press the green call key to dial the phone number.

Editing a phonebook entry

- Press **Names** to open the phonebook.
- Select an entry, press **Options**, select **Edit** and press **OK**.
- Edit the entry.

Deleting a phonebook entry

- Press **Names** to open the phonebook.
- Select an entry, press **Options**, select **Delete** and press **OK**. Press **Yes** in the following confirmation query.

Deleting all phonebook entries

- Press **Names** -> **Options** -> **Phonebook settings** -> **OK** -> **Delete all contacts**. Select whether the contacts in the phone or on the SIM card should be deleted and confirm.

Note:

- For deleting all entries in the phone you will have to enter the phone's password. Default it is set to **1122**.
- For deleting all entries on the SIM card you will have to enter your **SIM PIN**.

Copying all phonebook entries

- Press **Names** -> **Options** -> **Phonebook settings** -> **OK** -> **Copy contacts**. Select whether the contacts in the phone should be copied to the SIM card or vice-versa and confirm.

Storing a phonebook entry to a speed dialing key

- Press **Names** -> **Options** -> **Phonebook settings** -> **OK** -> **Speed dial** and press **OK**.
- Make sure that the feature Speed dial is switched on.

Note: When you see "Off" below status press the left softkey (On) to switch on the function.

- Select **Set numbers** and press **OK**.
- Select a button from the list (2...9) and press **Edit**.
- Select **From phonebook** -> **OK**, select an entry and press **OK**. Press **Yes** in the following confirmation query.
or

Select **Edit number** -> **OK**, enter a phone number and presse **OK**. Press **Yes** in the following confirmation query.

Storing a phonebook entry to an one-touch dialling key

- Press **Menu** -> **Settings** -> **Direct Number** -> **OK**
- Select a direct call key (M1, M2, M3) and press **OK**.
- Change the name for the key if necessary and press **▼**.
- Press **Edit** -> **From phonebook** -> **OK**, select an entry and press **OK**.

or

Press **Edit** -> **Edit number** -> **OK**, enter a phone number and press **OK**.

Note: To edit or delete the entry select-> Edit number.

Further options

With the phonebook open and an entry selected press **Options** and select one of the following options:

 **"PHONEBOOK" MENU**

- **View:** The entry is shown
- **Send text message:** Send a SMS to the respective phone number.
- **Edit:** You can edit the entry.
- **Delete:** The entry will be deleted.
- **Copy:** You can copy the entry to the telephone or to the SIM card.
- **Move:** You can move the entry to the telephone or to the SIM card. The entry will be deleted at its origin.
- **Send contact:** You can send the contact as a SMS.
- **Add to block list:** The entry will be added to the block list.
- **Caller groups:** You can define caller groups. In these caller groups, you can group phone book entries stored in the phone book of the phone.



"Messages" menu

You can send and receive text messages (SMS / Short Message Service). Received SMS are stored either internally in the phone or on the SIM card. Unread text messages are stored in the Inbox. When a new SMS is received, a message appears on the display.

If the memory is full, you will receive a message. To receive new messages you will have to delete old messages.

Messages menu

Press **Menu** -> **Messages** -> **OK**. You will have the following options:

- **Write message:** To write a new SMS.
- **Inbox:** Open the list of received SMS.
- **Drafts:** Open the draft list.
- **Outbox:** Open the list of SMS still to be sent.
- **Sent:** Open the list of already sent SMS.
- **Delete messages:** To delete a SMS.



"MESSAGES" MENU

- **Broadcast message:** If your provider supports this service you can change some parameters in this menu.
Note: These settings should only be changed by advanced users.
- **Templates:** Open the list of templates.
- **SMS settings:** You can change some of the SMS related parameters.
Note: These settings should only be changed by advanced users.

Checking/changing the SMS centre number

This particular number is needed for sending and receiving of SMS. It is stored on the SIM card correctly. In certain cases it is necessary to check that number or to change it.

- Press **Menu**, select **Messages** -> **OK** -> **SMS settings** and press **OK**.
- Select **Profile settings** and select the active profile (marked with a green tick).



- Press **Options**, select **Edit** and press **OK**.
 - Select the SMSC address (the phone number for your provider's SMS centre) and press **OK**.
 - If necessary delete the phone number with **Clear**, enter a new number using the digit keys and press **OK**.
- Note:** Please contact your network provider for this number.

Writing and sending a SMS

- Press **Menu**, select **Messages** -> **Write message** and press **OK**.
- Write your SMS using the digit keys. For more information for entering text refer to chapter "Using the phone / General", page 20.
- After having entered the text press **Options**, select **Send to** and press **OK**.
- Select **Enter number**, press **OK**, enter the phone number including the prefix and press **OK**.
- The entered phone number will be shown.



"MESSAGES" MENU

- Press **Options**, select **Send** and press **OK**.

or

- Select **Add from Phonebook** and press **OK**.
- Select an entry and press **OK**.
- The selected entry will be shown.
- Press **Options**, select **Send** and press **OK**.

Reading/deleting SMS and further options

- Press **Menu**, select **Messages-> Inbox** and press **OK**.
- Select a message.
- Press **OK** to read the message.
- Read the text and the date and time of receiving.
- Press **Options** and select from the following options:
 - **Reply**: Reply to the number from which the text was sent.
 - **Call sender**: Call the sender on the phone.
 - **Forward**: Forward the text to a different number.
 - **Delete**: Delete the SMS text.
 - **Delete all**: Delete all SMS.



- **Advanced**
 - **Use number:** You can make a call to the sender, store the number in the phonebook or send a SMS to the number.
 - **Copy to phone:** Copy the SMS from the SIM card to the phone.
 - **Move to phone:** Move the SMS from the SIM card to the phone.
 - **Copy all:** Copy all SMS from the SIM card to the phone or vice-versa.
 - **Move all:** Move all SMS from the SIM card to the phone or vice-versa.

"Call center" menu

A new call is shown on the display.

- Press **Back** to delete the message. The icon for a new call appears in the display. You can see this call "normally" in the **Missed calls** list.
- Press **View**, to read the caller's name and number.
- Press **Options**. For further options please refer to the following chapter..

Reading the calls list

- Press **Menu**, select **Call center** -> **Call history** and press **OK**.
- Select **Missed calls**, **Dialled calls** or **Received calls** and press **OK**.

In these lists you will have the following options:

Press **Options** and select one of the following options:

- **View**: Read the details.
- **Send text message**: Send a SMS to the phone number.

- **Add to block list:** Add the entry to the block list.
- **Edit before call:** Edit the phone number before calling back.
- **Delete:** Delete the entry.

Deleting the calls list

- Press **Menu**, select **Call center** -> **Call history** and press **OK**.
- Select **Delete call logs** and press **OK**.
- Select a list to delete **Missed calls**, **Dialled calls**, **Received calls** or **Delete all** and press **OK**. Press **Yes** in the following confirmation query.

Further options

- Press **Menu**, select **Call center** -> **Call history** and press **OK**.
- Select **Call timers** and press **OK**. The call times for **Last call**, **Dialled calls** and **Received calls** are shown. Select **Reset all** to reset the call timers. Press **Yes** in the

following confirmation query.

- Select **Text msg. counter** and press **OK**. You will see the number of SMS **Sent** and **Received**. Select **Back** (left softkey) to reset the counters. Press **Yes** in the following confirmation query.

Call settings

- After pressing **Menu -> Call center -> Call settings -> OK** you have the following options:
 - **Caller ID:** Settings for the transmission of your phone number.
 - **Set by network:** Using the default setting of your provider.
 - **Hide ID:** No transmission of your phone number.
 - **Send ID:** Transmission of your phone number.
 - **Call waiting:** Settings for an incoming call if you are already in a conversation.
 - **Activate:** The second call will generate a short



beep in the earpiece.

- **Deactivate:** The second caller will get the busy tone.
- **Query status:** Information on the current setting.
- **Call divert:** Settings for call diversion.
 - **Divert all voice calls:** You can **Activate** a call diversion for all voice calls (enter subsequently a destination or select **To voicemail**, if you want to divert to your voice mail box), **deactivate** a diversion or get information on the current setting with **Query status**.
 - **Divert if unreachable:** Call diversion, if your phone is not available (switched off or "No network"). For information on settings please refer to "Divert all voice calls".
 - **Divert if no answer:** Call diversion, if you do not accept the call. For information on settings please refer to "Divert all voice calls".



"CALL CENTER" MENU

- **Divert if busy:** Call diversion, if your phone is busy. For information on settings please refer to "Divert all voice calls".
- **Divert all data calls:** Diversion for all "No voice" calls. For information on settings please refer to "Divert all voice calls".
- **Cancel all diverts:** To cancel all call diversions.
- **Call barring:** Barring of incoming or outgoing calls. The requested password is default 1234. You can change it to a personal password (-> Change barring password).
 - **Outgoing calls:** If you select **All calls**, no more calls can be dialled. If you select **International calls**, no more calls to networks abroad can be dialled. If you select **International calls except to home PLMN**, only calls to your home country can be made.
 - **Incoming calls:** If you activate **All calls** no more



calls will be signalled - You are not available. The setting **When roaming** bars all incoming calls, if you are not in your home land (e. g. abroad on vacation).

- **Cancel all:** Cancel all barrings.
- **Change barring password:** Changing the password for activating/deactivating the call barring. Default the password is 1234.
- **Closed user group:** This feature must be supported by your provider. Please contact your provider for further information and the necessary settings.
- **Advance settings:**
 - **Block list:** You can enter a list of phone numbers to be blocked. If you activate this feature calls from phones with the respective numbers will not be signalled any more.
 - **Auto redial:** If the function is activated, phone numbers that were "busy," will be redialled auto-



"CALL CENTER" MENU

atically (interval 5 min, max. 5 attempts).

- **Call time display:** If the function is activated, the duration of the call is displayed.
- **Call time reminder:** You can specify whether you want to be alerted during a call by a beep in the earpiece after a certain time of call duration.

For **Single** you can set a time up to 3000 sec (= 50 min), for **Periodic** you can set up a time between 30 and 60 s.

“SOS” menu

This phone is equipped with an emergency call function. You can register up to 5 personal phone numbers for automatic periodic dialling or an emergency phone number for an emergency call centre.

Selecting an emergency call destination

- Press **Menu**, select **SOS** -> **SOS setting** -> **SOS mode setting** and press **OK**.
- Select **Set 5 numbers**, if you want to call up to five personal emergency call numbers (see below) or **Set call center**, if you want to call an emergency call centre. Select **Off** for deactivating the emergency call function.

Entering emergency call numbers

- Press **Menu**, select **SOS** -> **SOS setting** and press **OK**.
- Select **Set SOS numbers** -> **OK**, select one of the 5 possible entries and press **Edit**.
- Select **From phonebook**, to select a phone number

from the phonebook or **Edit number**, to enter the phone number manually.

or

- Select **Call center number** -> **OK** and enter the desired phone number.

Note: It is forbidden to enter a public emergency number such as police, fire and rescue control centre. It is a purely "private" emergency call.

Select an outgoing emergency voice message

- Press **Menu**, select **SOS** -> **SOS setting** -> **Set outgoing voice MSG** and press **OK**.
- Select **Default**, to select the default outgoing voice message.

or

- Select **User recorded**, to select a personal outgoing voice message. To use this setting you will have to

record the personal outgoing message before (see below).

Recording a personal emergency voice message

- Press **Menu**, select **SOS** -> **SOS setting** -> **Set outgoing voice MSG** and press **OK**.
- Press **Options**, select **Record** and press **OK**.
- Speak your personal outgoing message to the microphone.
- Stop recording with **Stop**.
- Press **Yes** in the following confirmation query.

Emergency call procedure

Push the SOS switch on the rear side of the phone to the upper position - **SOS** is visible. When the automatic SOS call starts you will hear a siren tone.

When "Set 5 numbers" is set:

- The first phone number will be dialled.
- If the first phone number will not answer the next phone number will be dialled and so on. All phone numbers (max. 5) will be called one by one subsequently. If you have only set one phone number, the phone will only call that number cyclically. This procedure will be repeated as long as the phone's battery is not empty.

The procedure stops, as soon as the first person answers. The emergency voice message will be played. If the called party press **key "0"** within 10 seconds after your recorded voice playing ended, hands free mode will be activated at your side and you can talk to the called person directly.

- **Note:** Please mention explicitly in your personal emergency message, that the called party will have to press key “0” to be able to speak with you. If not, the loop continues. This prevents the emergency loop from terminating, when, for example, an answering machine takes your emergency call.
- The emergency loop continues even after an answered emergency call, until you cancel the emergency (push emergency switch down again).

Cancel the emergency call function

Push the SOS switch on the rear side of the phone in the lower position again.

"Settings" menu

User profiles

You can store different profiles (special settings dependent on user and surroundings), which you can switch quickly.

- Press **Menu**, select **Settings** -> **User profiles** and press **OK**.
- Select one of the profiles from the list and press **Options**.
- You have the following options:
 - **Activate**: The profile with the respective settings is activated.
 - **Customize**: Change the settings for the respective profile.
 - **Tone settings**
 - **Incoming call** - Set the ring tone for incoming calls
 - **Alarm** - Set the melody for the alarm



- **Power on** - Set the tone for powering on the phone.
- **Power off** - Set the tone for powering off the phone.
- **Cover open** - Set the tone for opening the phone's cover.
- **Cover close** - Set the tone for closing the phone's cover.
- **Message** - Set the tone for a received SMS.
- **Keypad** - Select whether the confirmation of a pressed button should be confirmed with a **Click**, a **Tone**, **talking** (with a voice prompt when entering a digit) or **Silent**.
- **Volume**: Select the volume for the **Ring tone**, the **Key tone** and the **Alarm tone**.
- **Alert type**: Select whether an incoming call should be signalled by **Ring only**, **Vib. only**, **Vib. and ring** or **Vib. then ring** (Vib. = vibration).

- **Ring type:** You can select **Single**, **Repeat** or **Ascending**.
- **Extra tone:** You can switch different tones for special circumstances on and off (**Warning / Error / Network connect / Call connect**).
- **Answer mode:** With the setting **Cover answer** activated an incoming call will be taken by opening the cover.

If you select **Any key** incoming calls can be taken by any key (except the right softkey and the red end call key).

If not a single setting is selected calls can only be taken with the green call key

Direct number

You can assign important phone numbers to the one-touch dialling keys M1, M2 and M3.

- Press **Menu**, select **Settings** -> **Direct Number** and press **OK**.

- Select a one-touch dialling key and press **OK**.
- Change the name if necessary (max. 4 characters) and press **▼**.
- Press **edit** and select an entry from the phonebook, enter the phone number manually or delete the displayed phone number.

Tone control

Set the tone for the earpiece/loudspeaker.

- Press **Menu**, select **Settings** -> **Tone control** and press **OK**.
- Select **Normal frequency**, **Low frequency** (increases the lower frequencies) or **High frequency** (increases the higher frequencies) and press **OK**.

Switching Boost on and off

- Press **Menu**, select **Settings** -> **Boost** and press **OK**.
- Select **Boost On** to activate the Boost function permanently or **Boost Off** to deactivate it.

During a call the volume control can be used to adjust the volume level in both Boost ON or OFF modes. See page 18.

Prolonged listening at full speaker volume can cause hearing damage.

Phone settings

- Press **Menu**, select **Settings** -> **Phone settings** and press **OK**.
- You have the following options:
 - **Time and date:** In this menu you can **Set home city**, **Set time/date** and **Set format** (time 24/12h / date (DD MM YYYY/ MM DD YYYY / YYYY MM DD) / Date separator).
 - **Schedule power on/off:** You can set up to four automatic switch on/off times for your phone. Select an entry and press **Edit**. Select under Status "Enable" using the arrow keys ◀/▶ to activate the

function. Select whether the phone should be switched on (“Power on”) or switched off (“Power off”). Enter the desired time and press **OK**.

Note: Please note that depending on the settings entering the SIM PIN is required when switching the phone on. See also -> Security settings / SIM lock, page 60.

Language: Select a language for the display.

- **Pref. input method:** Select which setting you prefer for entering text (phonebook entries/SMS).

- **Display**

- **Wallpaper:** Select a wallpaper for the standby mode.

- **Screen saver:** Select on **Settings/Status**, whether the screen saver should be on or off and set a time to start (if status is “On”). **Select** offers different pictures.

- **Power on display/Power off display:** Select an animation which should be played when powering the phone on/off.
- **Dedicated key:** You can assign quick access for some menus to the navigation key ▲ /▼/ ◀/▶. Pressing the respective key in standby opens the assigned menu directly.
 - Select a key (**Up**, **Down**, **Left** or **Right**), press **Edit** and select a function from the list. Press **OK**.
- **Misc. settings**
 - **LCD backlight:** Set the brightness and the duration for the backlight.
 - **Incoming and SMS LED:** Select whether the indicator LED for incoming calls and SMS should be always active (On), between 8 pm and 8 am off (Night mode) or always deactivated (Off).
 - **Charge LED:** Select whether the indicator LED for charging should be always active (On), bet-

ween 8 pm and 8 am off (Night mode) or always deactivated (Off).

Network settings

- Press **Menu**, select **Settings** -> **Network settings** and press **OK**.
- You have the following options:
 - **Network selection:** Select whether the network selection should be automatic or manual (**Selection mode**), start a **New search** or select a network from the list (**Select network**). When **Automatic** is selected the phone tries to connect to your SIM card's provider.
 - **Preferences:** In the preferences list you can change the priority or delete entries.

Security settings

- Press **Menu**, select **Settings** -> **Security settings** and press **OK**.

- You have the following options:
 - **SIM lock:** You can turn on or off the request for the SIM PIN when the phone is switched on. This is not allowed for some SIM cards/providers.
 - **Change password:** You can change the following passwords:
 - PIN (of the SIM card)
 - PIN2 (of the SIM card)
- For further information regarding SIM PIN 1 and 2 contact your network provider

Bluetooth

- Press **Menu**, select **Settings** -> **Bluetooth** and press **OK**.
- You have the following options:
 - **Bluetooth:** Switching the function on or off.
 - **Visibility:** Select whether your phone is visible for other Bluetooth devices when the Bluetooth function is activated.

- **My device:** For connecting the phone to another Bluetooth device with audio profile (e. g. Headset or car kit).

Previously the "Search audio device" and the "pairing" with the device has to be carried out. After selecting the device and **Options** you have the following options:

- Connect (with the paired device)
 - Show the service list
 - Change name
 - Delete device
 - delete all devices
- **Search audio device:** After pressing **OK** the phone searches active bluetooth devices. Having found a device this must be paired with the phone (left soft-key: **Pair**).
 - **My name:** The Bluetooth name. Can be changed.

- **Advanced:** After pressing **Options** you have the following options:
 - **Audio path:** Determine whether the audio remains on the phone or is routed to a Bluetooth headset.
 - **My address:** The phone's Bluetooth address.

Note: If your phone is connected to a Bluetooth hands-free device you must copy your phone book entries from your SIM card to the phone (see page 32) before you can use the hands-free device to call those numbers and to enable the hands-free device to display the caller's name instead of the phone number during a call.)

Restore factory settings

You can reset the phone to its factory settings. You must enter the phone password. This is factory set to 1122.

"Organizer" menu

Calendar

You can set the calendar from January 1970 to December 2030. With **Options** the following functions are available:

- View
- View all
- Add event
- Delete event
- Jump to date

Calculator

The phone can support four continuous mixed arithmetic operations.

- Enter the first digit(s) for your arithmetic operation.
Enter the "dot" using the hash key.
- Press the navigation key \blacktriangle / \blacktriangledown / \blacktriangleleft / \blacktriangleright to select the operation sign (+ - x \div).

- Enter the next digit(s)
- Press **OK** or the red button in the centre of the navigation key to carry out the operation.

Alarm

You can set 5 different alarms, which will sound once, daily or only on certain days.

- Select an entry and press **Edit**.
- Switch the alarm **On** or **Off** using **◀/▶** and press **▼**.
- Select **Once**, **Everyday** or **Custom**. Select the day using **◀/▶**, switch on and off using the left softkey **On / Off**. Days on which the alarm is given, are characterised by a red frame.
- Select with **Alert type** what kind of alarm should be given (Ring only / Vib. only / Vib. and ring).
- When the alarm goes off you can switch it off by pressing **Stop**.

Tasks

After pressing **Add** you can define tasks. There are various options available.

Stopwatch

The stopwatch has various features.

- **Typical stopwatch**
 - **Split timing:** Stopwatch with split timing and total time. Press **Start** to start the function, **Split** to take the split time (the total time is still displayed), **Pause** or the red button in the centre of the navigation key stops the stopwatch with saving ability, and after pressing **Options** you can **Reset** or **Continue** the stopwatch.
 - **Lap timing:** Stopwatch with lap timing without total time. Press **Start** to start the function, **Lap** to take the lap time (each elapsed time since the last round timing is displayed), **Pause** or the red button in the

centre of the navigation key stops the stopwatch with saving ability, and after pressing **Options** you can **Reset** or **Continue** the stopwatch.

- **View records:** list of the stored records.
- **nWay stopwatch**

The nWay stopwatch is composed of 4 parallel stopwatches that you can individually start with the navigation key **▲ /▼/ ◀/▶**.

The active timer can be started with the red button in the centre of the navigation key or the left soft key (**Start**), stopped (**Pause**) and resumed (**Cont.**).

Pressing the right softkey **Reset** resets the respective timer.

"Services" menu

The items in this menu depend on your network operator.
Please check with your provider for details.

Appendix

Technical data

Dual-Band	GSM 900 / DCS 1800
Additional functions	Bluetooth, torch, emergency call function
Battery	Li-Ion, 3.7V, 900 mAh
Maximum earpiece volume	+40 dB (distortion < 5 %)
Talk time	up to 7 hours
Standby time	up to 8 days
Dimensions	102 x 51 x 17 mm (closed) 195 x 51 x 11 mm (open)
USB connection	Micro USB, EU Standard
Headset connection	2.5 mm jack
SAR values	GSM 900 MHz 0,512 W/kg DCS 1800 MHz 0,582 W/kg

Service hotline

Should problems arise with the telephone, please refer to the following information first. In the event of technical problems, please contact our service hotline under tel. 0844 800 6503 (Using a UK landline, at the time of going to print: calls cost 6p for connection charge and then 5p a minute. Mobile costs may vary.) In the case of claims under the terms of guarantee, contact your sales outlet. There is a 2 year period of guarantee.

Problems and solutions

Problems

Remedy

The mobile phone cannot be switched on.

- No battery inserted.
- Battery is not charged.

The phone is requesting a PUK when I switch on the phone

If you do not have the PUK for your SIM card then contact your service provider

No signal quality is displayed.

Keypad does not function or only functions very slowly.

A message appears in the display for some functions, indicating execution/use is not possible.

No network connection. The mobile phone is in a location where there is no network service. Move to a different location or contact your service provider.

The operating speed of the display is reduced in the case of low temperatures. This is normal.

Some functions can only be used after the respective service has been applied for. Contact your service provider.

<p>Screen frozen or no response when pressing keys.</p>	<p>Remove the battery for 3 minutes and try again.</p>
<p>No connection to the mobile telecommunication network.</p>	<p>Contact your service provider.</p>
<p>The “Insert SIM” message appears in the display.</p>	<p>Ensure that the SIM card has been installed correctly. Contact your service provider, if necessary.</p>
<p>The battery cannot be charged or is empty within a short time.</p>	<ul style="list-style-type: none"> - Battery is defective. - Place the phone correctly in the charging unit or connect the charging unit properly. Clean the contact surfaces on the mobile phone and charging

unit with a soft, dry cloth.

- Charge the mobile for 4 hours.

Tips on the battery

- Only use batteries, cables and charging unit approved by the manufacturer, otherwise the battery could be damaged.
- Do not short circuit the battery. Always leave the battery in the phone to avoid accidentally short circuiting the battery contacts.
- Keep the battery contacts clean and free of dirt.
- The battery can be charged/discharged hundreds of times but its service life is limited. Replace the battery when the battery power has decreased noticeably.

Intended use

This mobile phone is designed for use when connected to a mobile phone network. Any other use is considered unintended use. Unauthorised modification or reconstruction is not permitted. Under no circumstances open the device or complete any repair work yourself.

Areas of use

- Do not use the phone in prohibited areas.
- Switch the phone off in the vicinity of medical equipment (e.g. in hospitals).
- Do not use the phone in petrol stations or near fuels and chemicals.
- Check with the airline whether mobile phones may be used on board.

Safety Information

- Prevent exposure to smoke, dust, vibration, chemicals, moisture, heat and direct sunlight. The phone is not waterproof; therefore, keep it dry.
- Only use original accessories and batteries. Never attempt to connect other products.
- If you want to connect the phone to another device, read the manual supplied with that device with regard to any detailed safety information.
- Never attempt to connect incompatible products.
- Repairs to this device may only be completed by qualified service personnel.
- All mobile communication equipment is subject to interference which may impair its performance.
- Keep the phone and accessories out of the reach of children.
- The SIM card can be removed. Caution! Small children can swallow them.

- The ringing tone is issued via the loudspeaker. Take an incoming call first and then hold the phone to your ear. This prevents any possible hearing damage.
- Only use the phone while driving or riding a transport vehicle in road traffic when using the approved hands-free equipment and appropriately positioned holders. Ensure that no safety-related functions are interfered with when operating the phone. It is essential to observe the applicable national laws and regulations.
- Always maintain a distance of at least 15 cm to implanted heart pacemakers to prevent any possible interference. If you have had a pacemaker implanted, do not carry the phone in a breast pocket when switched on. Always hold the phone to the ear furthest away from the pacemaker during calls. Switch the phone off immediately if you notice or suspect any adverse effects.

- This phone is hearing aid compatible. If you wear a hearing aid, however, please contact your doctor or the hearing aid manufacturer to inquire about any possible impairments through mobile communication equipment.
- Do not rely on the mobile phone as a safeguard for emergencies. For a variety of technical reasons, it is not possible to guarantee a reliable connection under all circumstances.

Power adapter plug



- Energiesparend
- Economisant l'énergie
- A risparmio di energia
- Energy efficient

The power adapter plug supplied fulfills the ecodesign requirements of the European Community (Directive 2005/32/EC). This means that the current consumption is considerably less, both in operation as well as in standby, in comparison to older power adapter plug models.

Disposal

In order to dispose of your device, take it to a collection point provided by your local public waste authorities (e.g. recycling centre). According to laws on the disposal of electronic and electrical devices, owners are obliged to dispose of old electronic and electrical devices in a separate waste container. The symbol indicates that the device must not be disposed of in normal domestic waste!



Batteries represent a hazard to health and the environment!

Never open, damage or swallow batteries or allow them to pollute the environment. They may contain toxic, ecologically hazardous heavy metals. You are legally obliged to dispose of power packs and batteries at the point of sale or in the corresponding containers provi-

ded at collection points by local public waste authorities.

Disposal is free of charge. The symbols indicate that the batteries must not be disposed of in normal domestic waste and that they must be brought to collection points provided by local public waste authorities.



Packaging materials must be disposed of according to local regulations.



Declaration of Conformity

This device fulfils the requirements stipulated in the EU directive: 1999/5/EU directive on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.

Conformity with the above mentioned directive is confirmed by the CE mark on the device. To view the complete Declaration of Conformity, please refer to the free download available on our web site **www.amplicomms.com**

Maintenance

- Clean the housing surfaces with a soft, fluff-free cloth. Do not use any cleaning agents or solvents.

Guarantee

AMPLICOMMS equipment is produced and tested according to the latest production methods. The implementation of carefully chosen materials and highly developed technologies ensure trouble-free functioning and a long service life. The terms of guarantee do not apply when a device malfunction was caused by the mobile telecommunications network operator/provider. The terms of guarantee do not apply to the batteries or power packs used in the products. The period of guarantee is 24 months from the date of purchase.

All deficiencies related to material or manufacturing errors within the period of guarantee will be redressed free of charge. Rights to claims under the terms of gua-

rantee are annulled following tampering by the purchaser or third parties.

Damage caused as a result of improper handling or operation, normal wear and tear, incorrect positioning or storage, improper connection or installation or Acts of Gods and other external influences are excluded from the terms of guarantee. In the case of complaints, we reserve the right to repair defective parts, replace them or replace the entire device.

Replaced parts or devices become our property. Rights to compensation in the case of damage are excluded where there is no evidence of intent or gross negligence by the manufacturer.

If your device shows signs of defect during the period of guarantee, please return it to the sales outlet in which you purchased the AMPLICOMMS device together with the purchase receipt. All claims under the terms of guarantee in accordance with this agreement can only be asserted at

the sales outlet.

No claims under the terms of guarantee can be asserted after a period of two years from the date of purchase and hand-over of the product.

Index

3-party conference. 26

A

Alarm. 64

Areas of use 73

B

Battery status 7

Bluetooth 60

Boost 55

C

Calculator 63

Calender 63

Call barring. 44

Call divert 43

Call settings 42

Call waiting. 42

Calling 23

Calls list. 24, 40

Cancel the emergency
call function 51

Charging the battery 6

Charging via the mini
USB charging socket. 6

Checking the memory
status. 28

D

Declaration
of Conformity. 78

Desktop charging unit. 6

Dialling a phone
number 23

Direct number 54

Display 57

Disposal 77

E

Emergency call
destination 47

Emergency call
numbers 47

Emergency call
procedure 49

Emergency voice
message 48

Ending a call 9

Entering text 20

G

Guarantee 79

H

Hands-free 26

I

Icons in the display 18

Installing the SIM
card and battery 4

Intended use 73

L

Language 8, 57

M

Maintenance 79

Making a call 9

Memory status 28

Messages menu 35

Mini USB charging
socket 6

Multitap mode 21

Muting the microphone 26

N			
Network settings	59	Rejecting a call	9
		Restore factory settings	62
O		S	
One-touch		Safety Information	74
dialling	24, 33, 54	Service hotline	69
		Smart text input	20
P		SMS center number . . .	36
Personal emergency		SOS	47
voice message	49	Special key functions . .	14
Phone settings	56	Speed dialling	24, 32
Problems and solutions	69	Stopwatch	65
		Switching the mobile	
Q		phone on and off	7, 22
Questions and Answers	10	T	
Quick Start Guide	2	Taking a call	9, 25
		Tasks	65
R		Technical data	68
Range of your Network . .	8		
Redial	24		

Time and date	9
Tips on the battery	72
Tone control	55
Torch	23

U

User profiles	52
-------------------------	----

V

Volume	26
Volume control	18

W

What is in the box	4
------------------------------	---

Menu tree

Messages

Write message

Inbox

Drafts

Outbox

Sent

Delete messages

Broadcast messages

Templates

SMS settings

Profile settings

Voicemail server

Common settings

Delivery report

Reply path

Save sent messages

Memory status

Preferred storage

Phonebook (Option)

View

Add new contact

Send text message

Edit

Delete

Copy

Move

Send contact

- Add to block list
- Caller groups
- Phonebook settings
 - Preferred storage*
 - Speed dial*
 - Memory status*
 - Copy contacts*
 - Move contacts*
 - Delete all contacts*

Call center

Call history

- Missed calls
- Dialled calls
- Received calls
- Delete call logs
- Call timers
- Call costs
- Text msg. counter

Call settings

- Caller ID
- Call waiting
- Call divert
- Call barring
- Closed user group
- Advance settings
 - Block list*
 - Auto redial*

Call time display
Call time reminder

SOS

SOS setting

SOS mode setting
Set SOS numbers
Call center number
Set outgoing voice MSG

Record SOS MSG

Settings

User profiles

Direct Number

Tone Control

Boost

Phone settings

Time and date
Schedule power on/off
Language
Pref. input methods
Display
Wallpaper
Screen saver
Power on display
Power off display
Dedicated key
Extra settings
LCD backlight

Incoming and SMS LED

Charge LED

Network settings

Network selection

Preferences

Security settings

SIM lock

Change password

Bluetooth

Bluetooth

Visibility

My device

Search audio device

My name

Advanced

Audio path

My address

Restore factory settings

Organizer

Calendar

Calculator


Alarm

Tasks

Stopwatch

Services

(depending on network provider)

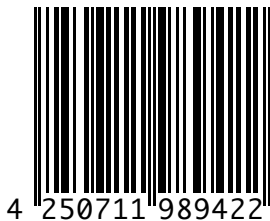

Distribution: Audioline GmbH
D-41460 Neuss
03/2013 – Edition 1.3

